




Seed Tender Bottom Auger Replacement Instructions




1-800-264-6587



Open the auger clean-out door at bottom of bottom auger. Remove bolt using a 1/2" wrench.

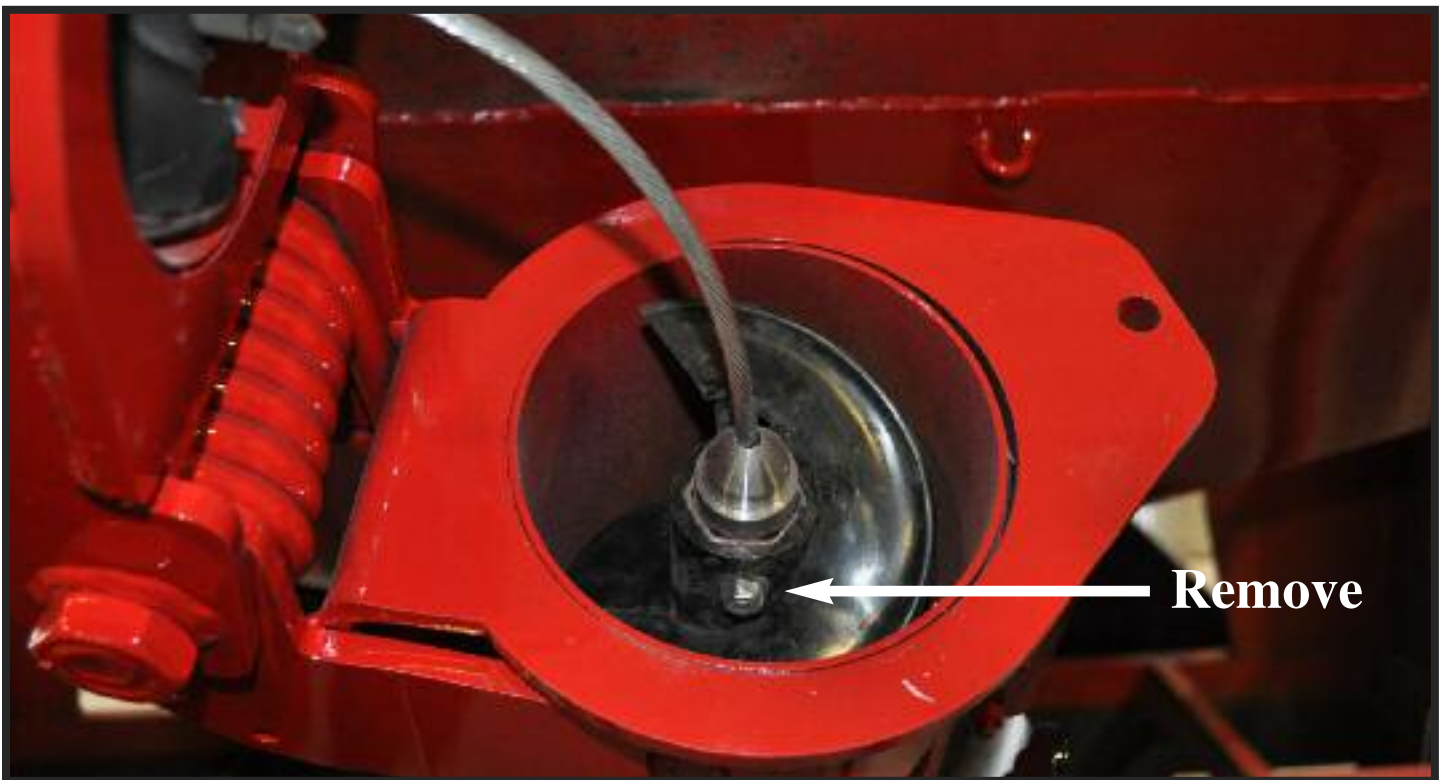

Remove top bolt on bottom auger.

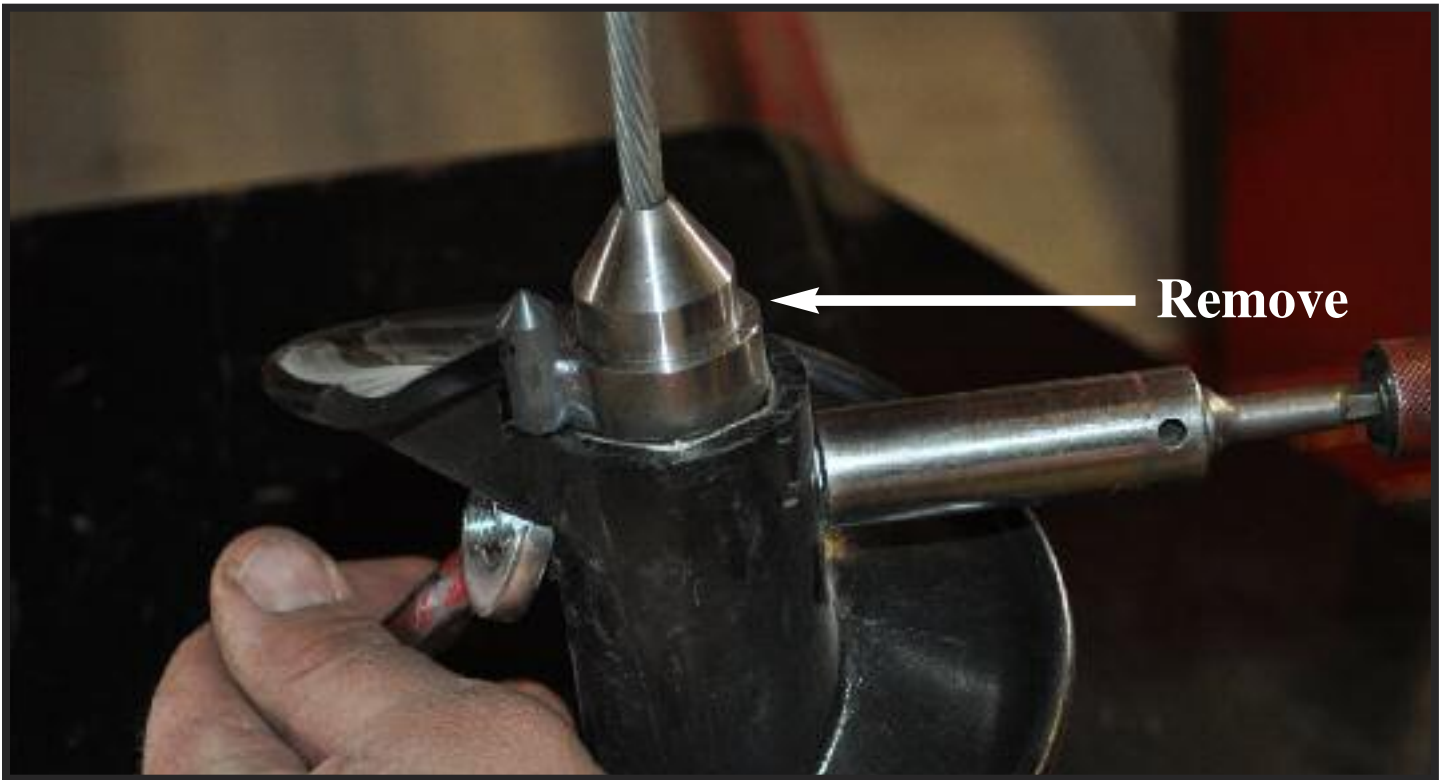

After you remove the bolt, remove the Drive Dog.



Remove broken flighting.



Use a screw driver and pry back the flanging enough to allow you to tamp down the flanging. Then you can replace the Drive Dog and all bolts.