

Patriot Pathfinder

Nurse Trailer Owner's Manual



Manufactured by Minden Machine Shop Inc. 1302 K Road Minden NE 68959 308-832-0220

Table Of Contents

Topic	Page Number
Introduction	3
Safety and Operation Rules	4
Transporting	9
Troubleshooting	12
Storage	12
Trailer Decals	13
Attaching Front Hitch	16
Machine Measurements	17
Dimensions	18
Lubrication	19
Parts Diagrams	21
Warranty	36

INTRODUCTION

Purpose:

The Patriot Pathfinder nurse tank trailer serves as a bulk liquid delivery system for your planter or other bulk liquid application systems.

Features:

- 1. Frame Rugged built and designed to cradle tank.
- 2. Telescoping tongue A telescoping tongue that allows easy hook up.
- 3. Pathfinder Design This allows the trailer to follow the row behind the implement.
- 4. Transport Mode This design allows the transport of the trailer at speeds up to 25 MPH
- 5. Field Mode Allows for both axles to turn enabling the trailer to follow in a more precise manner.

Thank you for choosing the Patriot Pathfinder Trailer. This manual covers the operation and maintenance of the Patriot Pathfinder Trailer. All information in this manual is based on the latest production information available at the time of printing. For the latest version of this catalog please call 1-800-264-6587 or visit www.patriotequip.com and download the latest version.

Minden Machine Shop Inc. reserves the right to make changes at any time without notice and without incurring any obligation. Please become familiar with all safety, operating, maintenance and troubleshooting information. This will ensure your safety and long life for the system.

SAFETY AND OPERATION RULES

GENERAL SAFETY STATEMENTS

Safety precautions are essential when the use of any mechanical equipment is involved. These precautions are necessary when using, storing, and servicing mechanical equipment. Using this equipment with the respect and caution demanded will considerably lessen the possibilities of personal injury. If safety precautions are overlooked or ignored, personal injury or property damage may occur.

This unit is for specific applications. It should not be modified or/and used for any application other than which it was designed. If there are any questions regarding its application, write or call Minden Machine Shop, Inc for more information, at 1-800-264-6587. Do not use this unit until you have been advised.

Read this entire manual carefully - know your equipment. Consider the application, limitations, and the potential hazards specific to your unit. Occupational safety is of prime concern to us. This manual was written with the safety of the operator and others who come in contact with the equipment as our prime concern. The manual presents some of the day-to-day work problems encountered by the operator and other personnel. We wrote this manual to help you understand safe operating procedures for Patriot Pathfinder Trailers. We want you as our partner in safety. A copy of this manual should be available to all persons who may operate this machine.

It is your responsibility as an owner or operator or supervisor to know what specific requirements, precautions and work hazards exist and to make these known to all other personnel working with the equipment or in the area, so that they too may take any necessary safety precautions that may be required. Avoid any alterations of the equipment. Such alterations may create a dangerous situation where serious injury or death may occur.

Why is SAFETY important to you?

3 BIG REASONS							
1	Accidents disable and kill						
2	Accidents cost money						
3	Accidents can be avoided						

Signal Words

Note the use of the signal words **DANGER**, **WARNING** and **CAUTION** with safety messages. The appropriate signal word for each message has been selected using the following guidelines:

DANGER – An immediate and specific hazard, which will result in severe personal injury or death if proper precautions are not taken.

WARNING – A specific hazard or unsafe practice, which could result in severe personal injury or death if proper precautions are not taken.

CAUTION – Unsafe practices which could result in personal injury if proper precautions are not taken, or a reminder of good safety practices.

SAFETY ALERT SYMBOL



The symbol shown above is used to call your attention to instructions concerning your personal safety. Watch this symbol - it points out important safety precautions. It means ATTENTION! BECOME ALERT! Your personal safety is involved! Read the message that follows and be alert to the possibility of personal injury or death.

Anyone who will operate or work around a Patriot Pathfinder Trailer shall first read this manual! This manual is to be delivered with the equipment to its owner. Failure to read this manual and its safety instructions is a misuse of equipment.

SAFETY EQUIPMENT

Please, remember safety equipment provides important protection for persons working around a machine that is in operation. Be sure <u>ALL safety shields and protective devices are installed and properly maintained</u>. If you find any shields or guards damaged or missing, contact Minden Machine Shop Inc. for the correct items.

SERIAL NUMBER

To ensure efficient and prompt service, please furnish us with the model and serial number of your Patriot Pathfinder Trailer in all correspondence or other contact. The Serial Number is located on the left side near the tongue.

LIGHTING AND MARKING

It is the responsibility of the customer to know the lighting and marking requirements of the local highway authorities and to install and maintain the equipment to provide compliance with the regulations. You may need to add extra lights when transporting at night or during periods of limited visibility.

SAFETY OVERVIEW

YOU are responsible for the SAFE operation and maintenance of your Patriot Pathfinder Trailer.

YOU must ensure that you and anyone who will operate, maintain, or work around the Patriot Pathfinder Trailer must be familiar with the operating, maintenance, and safety information contained in the manual. This manual will take you step by step through your working day and alert you to all good safety practices while operating the trailer.

Remember YOU are the key to safety. GOOD PRACTICES protect not only you but also the people around you. Make these practices a working part of your safety program. Be certain EVERYONE operating this machine is familiar with the procedures recommended and follows safety precautions. Remember, most accidents can be prevented. Do not risk injury or death by ignoring any information addressed.

Pathfinder Trailer owners must give operating instructions to operators before allowing them to operate the trailer. They must be reviewed at least annually thereafter per OSHA regulation 1928.57.

The most important safety device on the equipment is a SAFE OPERATOR. It is the operator's responsibility to read and understand ALL instructions in the manual and to follow them. All accidents can be avoided!

Any person who has not read and understood all operation and safety instructions is not qualified to operate the Patriot Pathfinder Trailer. An untrained operator exposes himself and bystanders to possible serious injury or death.

Do not modify the equipment in any way. Unauthorized modifications may impair the functions and/or safety and could affect the life of the equipment.

SAFETY AFFIRMATION

- 1. I have read and understand the operator's manual and all safety signs before operation, maintenance or use of the Patriot Pathfinder.
- 2. I will allow only trained persons to operate the Patriot Pathfinder Trailer. *An untrained operator is not qualified to operate this equipment.
- 3. I have access to a fire extinguisher.
- 4. I have all guards in place and will not operate the Patriot Pathfinder Trailer without them.
- 5. I will not allow riders on the Patriot Pathfinder Trailer.
- 6. I understand the danger of moving parts (PTO, and pinch points) and will stop engine before servicing.
- 7. I recognize the danger of coming in contact with power lines.
- 8. I am aware of the need to secure the Patriot Pathfinder tank to its trailer.
- 9. I understand the danger of working with bulk liquids.
- 10. I understand that any accidents that occur with the Patriot Pathfinder Trailer are my responsibilities.
- 11. I understand that Minden Machine Shop will not be held responsible of any accidents that involve the Patriot Pathfinder Trailer.

SIGN OFF SHEET (this must be signed annually as part of your safety program)

As a requirement of OSHA, it is necessary for the employer to train the employee in the safe operation and safety procedures with this Patriot Pathfinder Trailer. We include this sign off sheet for you convenience and personal record keeping.

DATE	EMPLOYER SIGNATURE	EMPLOYEE SIGNATURE



SAFETY PROCEDURES

- 1. Use only proper pumping systems when using this trailer.
- 2. Use only proper pulling equipment with this trailer
- 3. Do not use makeshift systems to pull or fill this trailer.
- 4. Do not attempt to raise the Patriot Pathfinder Trailer unit by hoist or forklift when it is loaded with product.
- 5. Check and tighten all necessary bolts and tank straps. Carrying the tank loose could cause an accident.
- 6. Do not park your Patriot Pathfinder Trailer on an incline or leave your machine running unattended.
- 7. Do not operate unit without safety devices and signs in place.
- 8. Do not allow any riders on the Patriot Pathfinder Trailer.
- 9. Do not enter the tank at any time, as serious injury may occur.
- 10. In case of any defect or awareness of potential danger, please contact Minden Machine Shop, Inc. at 1-800-264-6587 immediately.



Operation of this Patriot Pathfinder Trailer shall be limited to competent and experienced persons. In addition, anyone who will operate or work around a Patriot Pathfinder Trailer must use good common sense. In order to be qualified, they must also know and meet all other requirements, such as:

- 1. Some regulations specify that no one under the age of 18 may operate power machinery. This includes Patriot Pathfinder Trailers. It is your responsibility to know what these regulations are in your own area or situation.
- 2. Current OSHA regulations state in part: "At the time of initial assignment and at least annually thereafter, the employer shall instruct every employee or user in the safe operation and servicing of all equipment with which the employee or user is, or will be involved."
- 3. Unqualified persons are to stay out of the work area as shown in the work diagrams.
- 4. A person who has not read and understood all operating and safety instruction is not qualified to operate the machine.

SAFETY DECALS

- 1. Keep safety decals clear and legible at all times.
- 2. Replace decals and signs that are missing or have become unreadable.
- 3. Safety signs are available from your Dealer or the Manufacture.

How to install Safety Decals

- 1. Be sure that the installation area is clean and dry.
- 2. Decide on the exact position before you remove the backing paper.
- 3. Align the decal over the specified area and carefully press the small portion with the exposed sticky backing in place.
- 4. Slowly peel back the remaining paper and carefully smooth the remaining portion of the decal in place.
- 5. Small air pockets can be pierced with a pin and smoothed out using a piece of decal backing paper.



DESIGNATED WORK AREA

Before filling/using the Patriot Pathfinder Trailer, a designated work area should be established. The work area should be a perimeter in which no persons should be allowed that are not directly involved in the operation of the Patriot Pathfinder Trailer. Also, all persons in the work area must have read and understood this manual.



RULES FOR SAFE WORK AREA

Under no circumstances should persons not involved in the operation be allowed to trespass into the work area. It shall be the duty of all operators to see that children and/or other persons stay out of the work area! Trespassing into the work area by anyone not involved in the actual operation, or trespassing into a hazard area by anyone, shall result in immediate shut down by the operator.

It shall be the responsibility of all operators to see that the work area has secure footing, is clean and free of all debris, and tools, which might cause tripping and/or falling. It shall also be their responsibility to keep the work area clean and orderly during the operation.

OPERATING PROCEDURES



MACHINE INSPECTION

After delivery of your new Patriot Pathfinder Trailer and/or completion of assembly, before each use, inspection of the machine is mandatory. This inspection should include, but not be limited to:

- 1. Check to see that all guards are in place, secured and functional.
- 2. Are all fasteners tight?
- 3. Check all grease points and make sure they have sufficient grease.
- 4. Check the tires for proper inflation.
- 5. Inspect that the tires/rims are secured to the hubs.
- 6. Inspect the safety chains.
- 7. Is the connecting pin to the implement the correct size and in good condition?
- 8. Check that the tank bands are tightened correctly.
- 9. Inspect any additional plumbing that it is secured and not leaking.
- 10. Pull pin is secured in place with retaining pin.
- 11. Safety chains are securely attached to the pulling implement
- 12. Working in the field, is the Pathfinder trailer in field mode?
- 13. Transporting the Pathfinder on a road, is it in transport mode?
- 14. All pins are secured.

TRANSPORTING THE PATRIOT PATHFINDER TRAILER




Before transporting the Patriot Pathfinder, the trailer must be put into transport mode. Failure to put the Pathfinder trailer into transport mode will result in loss of control of trailer resulting in injury or death. Do not transport Patriot Pathfinder Trailer at speeds in excess of 25 MPH and comply with your state and local regulations governing marking, towing and maximum width. Observe safe driving and operation practices.



Be alert to overhead obstructions and electrical wires. Failure to do so may result in electrocution. Maintain at least ten (10) feet of clearance. See chart showing the height and width of your trailer.

HIGHWAY AND TRANSPORT OPERATIONS

- 1. Pathfinder Trailer must be put correctly into transport mode before operating on a public roadway.
- 2. Always drive at a safe speed relative to local conditions and ensure that your speed is low enough for an emergency stop to be safe and secure. Keep speed to a minimum.
- 3. Reduce speed prior to turns to avoid the risk of overturning.
- 4. Avoid sudden uphill turns on steep slopes.
- 5. Always keep towing vehicle in gear to provide engine braking when going downhill. Do not coast.
- Do not drink and drive.
- 7. Comply with state and local laws governing highway safety and movement of farm machinery on public roads.
- 8. Use approved accessory lighting, flags, and necessary warning devices to protect operators of other vehicles on the highway during daylight and nighttime transport.
- 9. The use of flashing amber lights is acceptable in most localities. However, some localities prohibit their use. Local laws should be checked for all highway lighting and marking requirements.
- 10. When driving the equipment on the road or highway under 20 MPH at night or during the day, use flashing amber warning lights and slow moving vehicle (SMV) identification emblem.
- 11. Plan your route to avoid heavy traffic.
- 12. Be a safe and courteous driver. Always yield to oncoming traffic in all situations, including narrow bridges, intersections, etc.
- 13. Be observant of bridge load ratings. Do not cross bridges rated lower than the gross weight at which you are operating.
- 14. Watch for obstructions overhead and to the side while transporting.
- 15. Always operate equipment in a position to provide maximum visibility at all times. Make allowances for increased length and weight of the equipment when making turns, stopping the unit, etc.

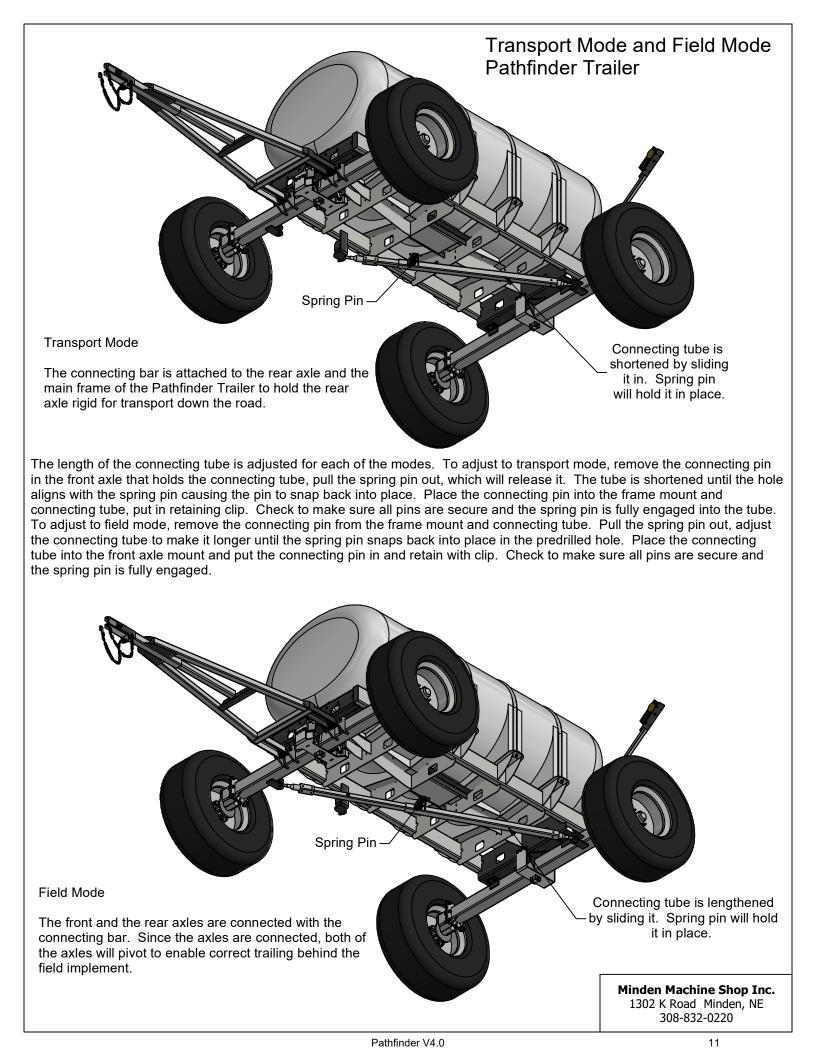

Symptom	Diagnosis	Correction
Pathfinder tracks poorly in the field	Are the axles square to each other?	Adjust connecting rod to square
		the axles.
	Is the Pathfinder in field mode?	Place the Pathfinder in field
		mode.
	Is the tow vehicle hitch centered on	Adjust tow vehicle hitch to
	the row?	center.
	Low tire pressure?	Check air pressure and adjust
		accordingly.
Pathfinder not tracking in road	Is the Pathfinder in transport mode?	Put in transport mode
transport	Is a tire low on air pressure?	Check air pressure and adjust accordingly.
	Is the rear axle square to the trailer?	Adjust connecting rod to square
		the axle to the trailer

Trouble Shooting

Storage

To store the Pathfinder Trailer:


- 1. Rinse the tank/tanks out with water and dispose of the wastewater in accordance with the local code
- 2. Remove all liquids from the tank/tanks, hoses, valves, pumps and etc. to prevent any damage from freezing.
- 3. Wash the trailer off to remove dirt/debris
- 4. Remove excess grease
- 5. Grease all grease points
- 6. Use touch up paint to paint any bare metal areas
- 7. Store the Pathfinder Trailer in an area away from high traffic areas
- 8. Do not allow anyone to climb on or play on the Pathfinder Trailer
- 9. Inspect all pivot points and pins for wear, replace as needed.
- 10. Inspect safety chains and hitch for any excessive wear

Optional Equipment

A plumbing kit can be purchased with the Pathfinder Trailer. However, Patriot Equipment realizes that each end user will plumb the Pathfinder Trailer in the way that works best for their individual operation. Be sure to route the hoses out of the way and have them secured properly. The hoses need to be correctly sized for the size of pump the operator will be using.



Pathfinder Trailer Decals

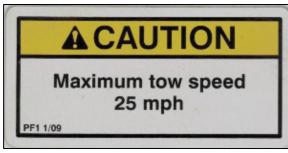

TS7000




Hitch capacity rating must be 24,000 lb minimum


TS7001




TS7003

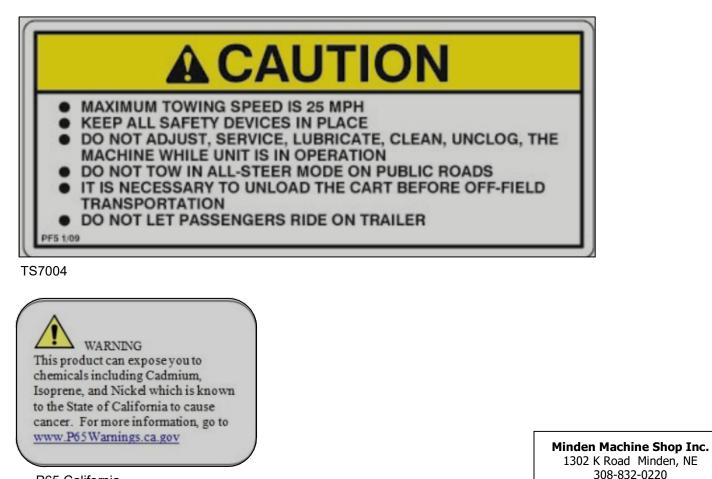

P65 California

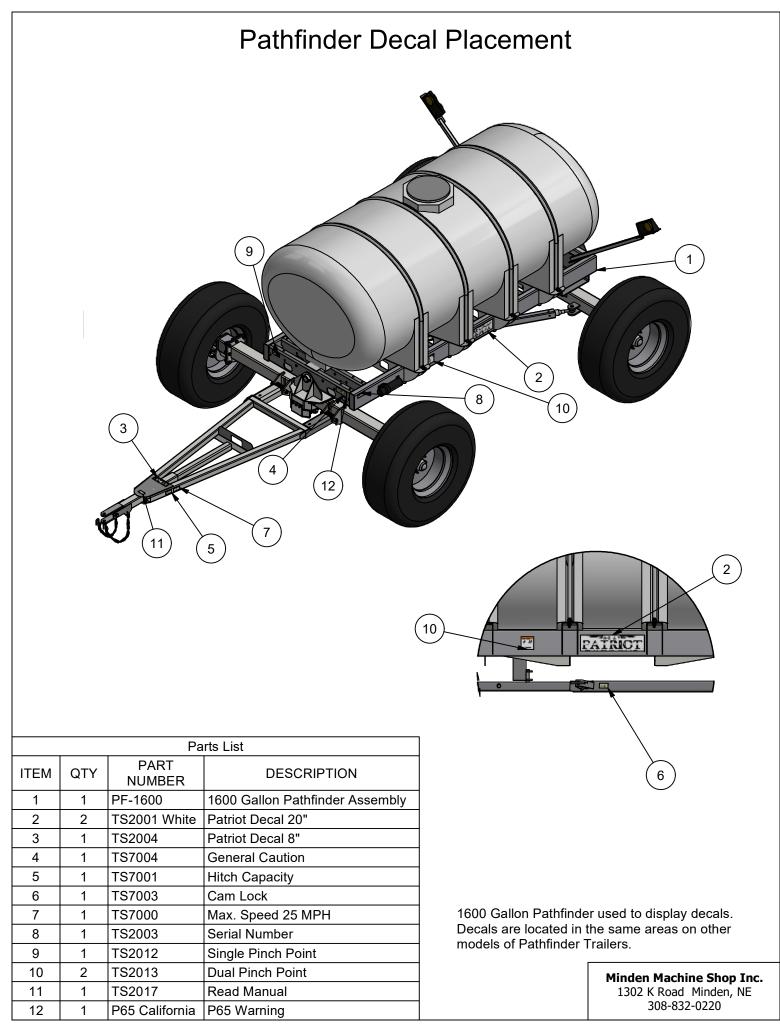

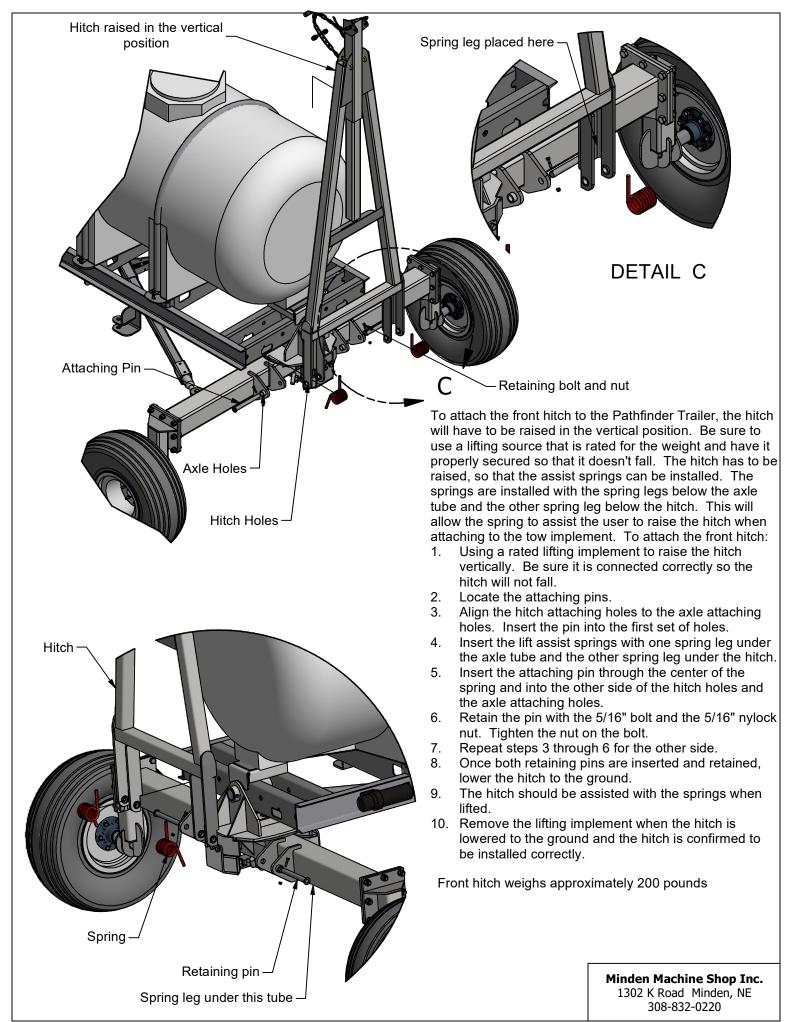

Machine Measurements

Pathfinder Dimensions Cone Tank Double Tank Standard Leg Tank \heartsuit \heartsuit В В В \rightarrow Щ ۲ ۲ Ш Ш ۲ Ł (\mathbf{o}) 0 œ 126¹/₈ 126¹/₈ С С 1261/8 С Α ٠A A


			Path	finder Dimen	sions				
Model	Style	Tank	Tire Size	Tire Height	Tire Width	Total Length (A)	Total Height (B) Clearance (C)	
1000S	Standard	1010 Gallons	12.5 x 15/8 Ply	32"	12"	275"	97"	27"	
1000S	Standard	1010 Gallons	3.5 x 16.1/6 Ply	41"	13.5"	279"	101"	31"	
1600S	Standard	1610 Gallons	17.5L x 24/8Ply	49"	17.5"	280"	102"	26"	
1600S	Standard	1610 Gallons	320/85R38	60"	12.5"	285"	107"	31"	
2000S	Standard	2000 Gallons	19.5L x 24/12Ply	52"	19"	281"	115"	27"	
2000S	Standard	2000 Gallons	320/85R38	60"	12.5"	285"	119"	31"	
2000D	Double	1610 Gallons 400 Gallons	19.5L x 24/12Ply	52"	19"	291"	103"	27"	
2000D	Double	1610 Gallons 400 Gallons	320/85R38	60"	12.5"	295"	107"	31"	
2040C	Cone	1020 Gallon 1020 Gallon	19.5L x 24/12Ply	52"	19"	285"	107"	27"	
2040C	Cone	1020 Gallons 1020 Gallons	320/85R38	60"	12.5"	285"	111"	31"	
2100D	Double	1610 Gallons 500 Gallons	19.5L x 24/12Ply	52"	19"	291"	103"	27"	
2500D	Double	2000 Gallon 500 Gallon	19.5L x 24/12Ply	52"	19"	291"	113"	27"	
2610S	Standard	2610 Gallon	19.5L x 24/12Ply	52"	19"	279"	126"	27"	
2640C	Cone	1320 Gallon 1320 Gallon	19.5L x 24/12Ply	52"	19"	285"	118"	27"	
						Patriot Equipmen 1302 K Road Mind 308-832-0220	en, NE property used only	ing, and the information here of Minden Machine Shop Inc. as authorized by us. Unpubl under the copyright laws.	, and may I

Lubrication and Maintenance



Warning!

For economical and efficient operation of your Patriot Pathfinder Trailer, maintain regular and correct lubrication. Neglect leads to reduced efficiency, excessive wear and needless down time.

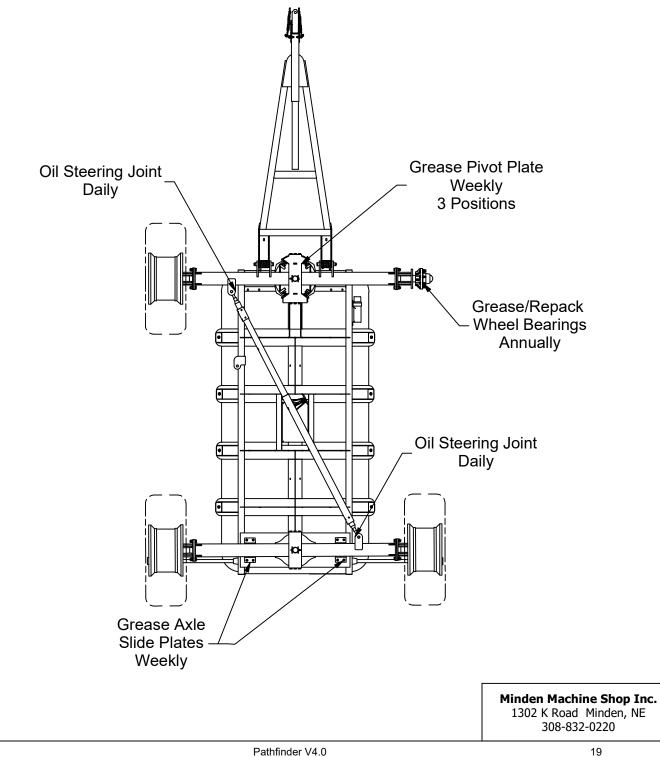

Torque Data for Standard Nuts, Bolts, and Capscrews

Tighten all bolts to torques specified in chart unless otherwise noted. Check tightness of bolts periodically, using bolt chart as guide. Replace hardware with some grade bolt.

Note: Unless otherwise specified, high-strength Grade 5 hex bolts are used throughout assembly of equipment.

	Boit Torque for Standard Boits											
	Gra	de 2	Gra	de 5	Gra	de 8						
Bolt Size A	lb-ft	(N.m)	lb-ft	(N.m)	lb-ft	(N.m)						
1/4"	6	8	9	12	12	16						
5/16"	10	13	18	25	25	35						
3/8"	20	27	30	40	45	60						
7/16"	30	40	50	70	80	110						
1/2"	45	60	75	75 100		155						
9/16"	70	95	115	155	165	220						
5/8"	95	130	150	200	225	300						
3/4"	165	225	290	390	400	540						
7/8"	170	230	420	570	650	880						
1"	225	300	630	850	970	1310						


Bolt Torque for Standard Bolts

Torque figures indicated are valid for non-greased or non-oiled threads and heads unless otherwise specified. Therefore, do not grease or oil bolts or capscrews unless otherwise specified in this manual. When using locking elements, increase torque values by 5%.

Bolt Torque for Metric Bolts


	Clas	s 8.8	Clas	s 9.8	Class	10.9
Bolt Size A	lb-ft	(N.m)	lb-ft (N.m)		lb-ft	(N.m)
6	9	13	10	14	13	17
7	15	21	18	24	21	29
8	23	31	25	34	31	42
10	45	61	50	68	61	83
12	78	106	88	118	106	144
14	125	169	140	189	170	230
16	194	263	216	216 293		357
18	268	363	:		364	493
20	378	513	:		515	689
22	516	699	:		702	952
24	654	886			890	1206


Grade or Class value for bolts and capscrews are identified by their head markings.

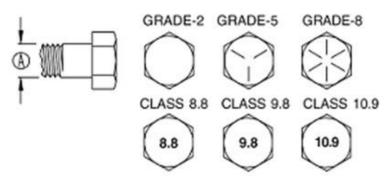


Parts Diagrams

	Patl	hfinder A	xle Space	er Kits					
Pathfinder Axle									
	8 Bolt Sp					olt Extensions			
Part Number	Length	Row Spacing	Wheel Base	Part Number	Quantity	Description			
Standard Axle	Length No Spacer	Row Spacing 30"	Wheel Base 120"	Part Number B3/4x2.5	Quantity 64	Description 3/4" Hex Bolt x 2-1/2"			
Standard Axle PF-CP-A012	Length No Spacer Narrow Tire Spacer	Row Spacing 30"	120"	Part Number B3/4x2.5 W3/4L	Quantity 64 64	Description 3/4" Hex Bolt x 2-1/2" 3/4" Lock Washer			
Standard Axle PF-CP-A012 PF-CP-A024	Length No Spacer Narrow Tire Spacer 6"	Row Spacing 30" 22"	120" 132" (11" offset)	Part Number B3/4x2.5	Quantity 64	Description 3/4" Hex Bolt x 2-1/2"			
Standard Axle PF-CP-A012 PF-CP-A024 PF-CP-A028	Length No Spacer Narrow Tire Spacer 6" 10"	Row Spacing 30" 22" 20"	120" 132" (11" offset) 140"	Part Number B3/4x2.5 W3/4L	Quantity 64 64	Description 3/4" Hex Bolt x 2-1/2" 3/4" Lock Washer			
Standard Axle PF-CP-A012 PF-CP-A024 PF-CP-A028 PF-CP-A025	Length No Spacer Narrow Tire Spacer 6" 10" 12"	Row Spacing 30" - 22" 20" 36"	120" 132" (11" offset) 140" 144"	Part Number B3/4x2.5 W3/4L	Quantity 64 64	Description 3/4" Hex Bolt x 2-1/2" 3/4" Lock Washer			
Standard Axle PF-CP-A012 PF-CP-A024 PF-CP-A028 PF-CP-A025 PF-CP-A026	Length No Spacer Narrow Tire Spacer 6" 10" 12" 16"	Row Spacing 30" 22" 20" 36" 38"	120" 132" (11" offset) 140" 144" 152"	Part Number B3/4x2.5 W3/4L	Quantity 64 64	Description 3/4" Hex Bolt x 2-1/2" 3/4" Lock Washer			
Standard Axle PF-CP-A012 PF-CP-A024 PF-CP-A028 PF-CP-A025	Length No Spacer Narrow Tire Spacer 6" 10" 12"	Row Spacing 30" - 22" 20" 36"	120" 132" (11" offset) 140" 144"	Part Number B3/4x2.5 W3/4L	Quantity 64 64	Description 3/4" Hex Bolt x 2-1/2" 3/4" Lock Washer			
Standard Axle PF-CP-A012 PF-CP-A024 PF-CP-A028 PF-CP-A025 PF-CP-A026	Length No Spacer Narrow Tire Spacer 6" 10" 12" 16" 20"	Row Spacing 30" 22" 20" 36" 38" 40"	120" 132" (11" offset) 140" 144" 152"	Part Number B3/4x2.5 W3/4L N3/4N	Quantity 64 64 64	Description 3/4" Hex Bolt x 2-1/2" 3/4" Lock Washer 3/4" Nut			
Standard Axle PF-CP-A012 PF-CP-A024 PF-CP-A028 PF-CP-A025 PF-CP-A026 PF-CP-A027	Length No Spacer Narrow Tire Spacer 6" 10" 12" 16" 20"	Row Spacing 30" 22" 20" 36" 38" 40"	120" 132" (11" offset) 140" 144" 152" 160"	Part Number B3/4x2.5 W3/4L N3/4N Faste	Quantity 64 64 64	Description 3/4" Hex Bolt x 2-1/2" 3/4" Lock Washer 3/4" Nut			
Standard Axle PF-CP-A012 PF-CP-A024 PF-CP-A028 PF-CP-A025 PF-CP-A026 PF-CP-A027 PF-CP-A027	Length No Spacer Narrow Tire Spacer 6" 10" 12" 16" 20" 10 Bolt S Length	Row Spacing30"22"20"36"38"40"SpacerRow Spacing	120" 132" (11" offset) 140" 144" 152" 160" Wheel Base	Part Number B3/4x2.5 W3/4L N3/4N Faste Part Number	Quantity 64 64 64 eners - 10 E Quantity	Description 3/4" Hex Bolt x 2-1/2" 3/4" Lock Washer 3/4" Nut Bolt Extensions Description			
Standard Axle PF-CP-A012 PF-CP-A024 PF-CP-A028 PF-CP-A025 PF-CP-A026 PF-CP-A027 Part Number Standard Axle	Length No Spacer Narrow Tire Spacer 6" 10" 12" 16" 20"	Row Spacing 30" 22" 20" 36" 38" 40"	120" 132" (11" offset) 140" 144" 152" 160" Wheel Base 120"	Part Number B3/4x2.5 W3/4L N3/4N Faste Part Number B3/4x2.5	Quantity 64 64 64 eners - 10 E Quantity 80	Description 3/4" Hex Bolt x 2-1/2" 3/4" Lock Washer 3/4" Nut Bolt Extensions / Description 3/4" Hex Bolt x 2-1/2"			
Standard Axle PF-CP-A012 PF-CP-A024 PF-CP-A028 PF-CP-A025 PF-CP-A026 PF-CP-A027 Part Number Standard Axle PF-CP-A031	Length No Spacer Narrow Tire Spacer 6" 10" 12" 16" 20" 10 Bolt S Length No Spacer 6"	Row Spacing 30" 22" 20" 36" 38" 40"	120" 132" (11" offset) 140" 144" 152" 160" Wheel Base 120" 132" (11" Offset)	Part Number B3/4x2.5 W3/4L N3/4N Faste Part Number B3/4x2.5 W3/4L	Quantity 64 64 64 Quantity 80 80	Description 3/4" Hex Bolt x 2-1/2" 3/4" Lock Washer 3/4" Nut Bolt Extensions 0 Description 3/4" Hex Bolt x 2-1/2" 3/4" Lock Washer			
Standard Axle PF-CP-A012 PF-CP-A024 PF-CP-A028 PF-CP-A025 PF-CP-A026 PF-CP-A027 Part Number Standard Axle PF-CP-A031 PF-CP-A032	Length No Spacer Narrow Tire Spacer 6" 10" 12" 16" 20" 10 Bolt S Length No Spacer 6" 10"	Row Spacing 30" 22" 20" 36" 38" 40" Spacer Row Spacing 30" 22" 20"	120" 132" (11" offset) 140" 144" 152" 160" Wheel Base 120"	Part Number B3/4x2.5 W3/4L N3/4N Faste Part Number B3/4x2.5	Quantity 64 64 64 eners - 10 E Quantity 80	Description 3/4" Hex Bolt x 2-1/2" 3/4" Lock Washer 3/4" Nut Bolt Extensions / Description 3/4" Hex Bolt x 2-1/2"			
Standard Axle PF-CP-A012 PF-CP-A024 PF-CP-A028 PF-CP-A025 PF-CP-A026 PF-CP-A027 Part Number Standard Axle PF-CP-A031	Length No Spacer Narrow Tire Spacer 6" 10" 12" 16" 20" 10 Bolt S Length No Spacer 6"	Row Spacing 30" 22" 20" 36" 38" 40"	120" 132" (11" offset) 140" 144" 152" 160" Wheel Base 120" 132" (11" Offset) 140"	Part Number B3/4x2.5 W3/4L N3/4N Faste Part Number B3/4x2.5 W3/4L	Quantity 64 64 64 Quantity 80 80	Description 3/4" Hex Bolt x 2-1/2" 3/4" Lock Washer 3/4" Nut Bolt Extensions 0 Description 3/4" Hex Bolt x 2-1/2" 3/4" Lock Washer			

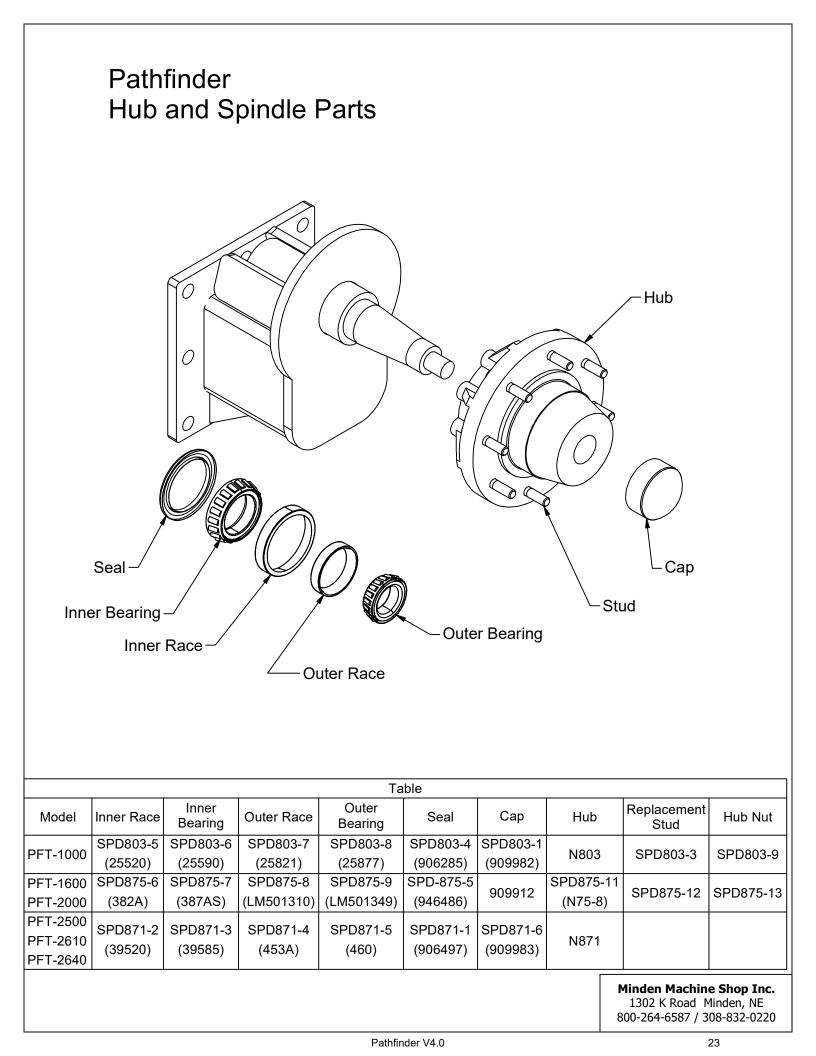


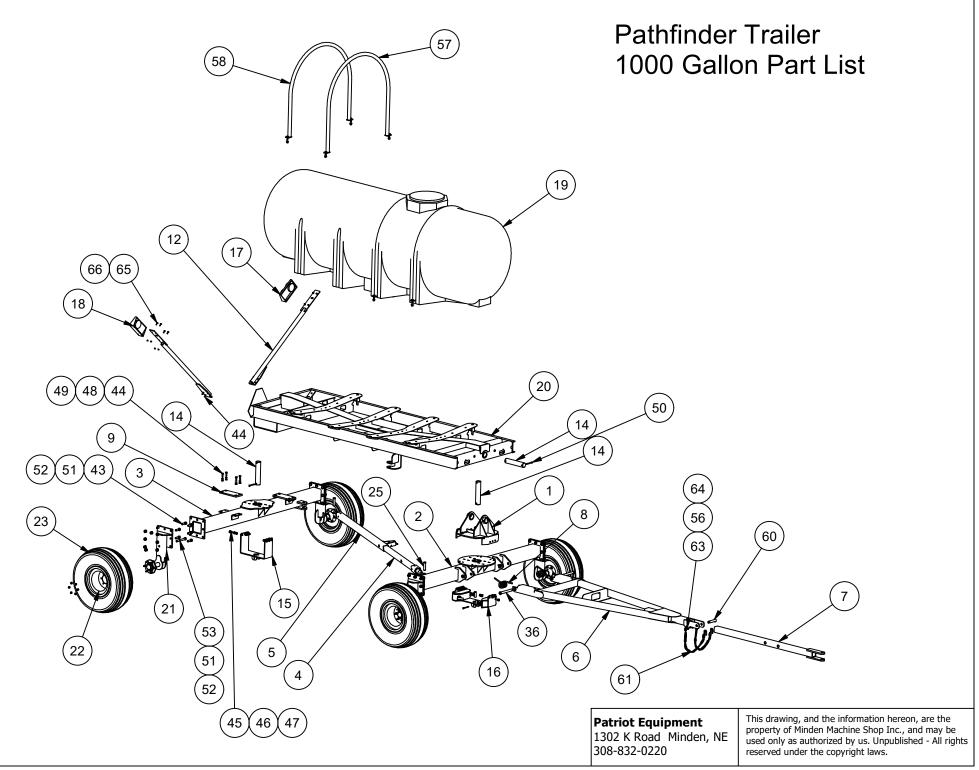


		Pathfinder Traile	r 1000 Gallon			Pathfin	der Trailer 1000 (Gallon
ITEM	QTY	PART NUMBER	DESCRIPTION	ITEM	QTY	PART NUM	IBER	DESCRIPTION
1	1	PF-CP-A007	Front Fifth Wheel Adjustable	51	32	N3/4N	Hex	Nut
2	1	PF-CP-A001	6x6 Front Axle Weldment	52	32	W3/4L	Loc	k Washer
3	1	PF-CP-A002	6x6 Rear Axle Weldment	53	4	B3/4x6.5	Hex	Bolt
4	1	PF-CP-A015	2x2 Tie Tube Weldment	54	2	B5/16x1.5	Hex	Bolt
5	1	PF-CP-A016	2.5x2.5 Tie Tube Weldment	55	8	B1/2x2.5	Hex	Bolt
6	1	PF-CP-A021	Tongue Reciever Weldment 3 1-2	56	20	W1/2F	Plai	n Washer
7	1	PF-CP-A022	Tongue Extension 3 inch	57	2	T1000W-2	Lon	g Tank Hoop
8	1	SP4003	Torsion Spring	58	2	T1000W-1	Sho	ort Tank Hoop
9	2	PFT4012	UHMW Axle Pad	59	24	N1/2NY	Nylo	ock Nut
12	2	PF-CP-A014	Tail Light Bracket	60	1	PFT4010	1" x	5" Pin
14	3	PF-CP-P006	1 7_16 Pivot Pin	61	2	TR1595	Safe	ety Chains
15	1	PF-CP-A005	Rear Pivot Support Weldment	63	2	B1/2x2.0	Hex	Bolt
16	1	PF-CP-A008	Front Pivot Support Weldment	64	2	N1/2L	Loc	k Nut
17	1	PFT4007L	Light Flasher Left	65	8	B1/4x1.0	Hex	Bolt
18	1	PFT4007R	Light Flasher Right	66	8	N1/4NY	Nylo	ock Nut
19	1	T1000W	1000 White Tank	67	8	N1/2NY	Nylo	ock Nut
19.1	1	T1000Y	1000 Yellow Tank	68	1	TR1590	Mar	nual Holder
20	1	PF-1000-A002	1000 Gallon Main Frame	70	2	N5/16NY	Nylo	ock Nut
21	4	PF-1000-A003	Axle Spindle Weldment					
22	4	PFT9133	White Rim 13.5x16.1 Tire					
22.1	4	PFT9134	Yellow Rim 13.5x16.1 Tire					
23	4	PFT9152	12.5x15 Yellow Rim and Tire					
23.1	4	PFT9151	12.5x15 White Rim and Tire					
23.2	4	PFT9131	13.5x16.1 Yellow Rim and Tire					
23.3	4	PFT9132	13.5x16.1 White Rim and Tire					
25	2	PFT4011	Clevis Pin					
36	2	PF-CP-A020	Tongue Pin Weldment					
43	28	B3/4x2.5	Hex Bolt					
44	12	B1/2x1.5	Hex Bolt					
45	12	B5/8x2.0	Hex Bolt					
46	12	N5/8N	Hex Nut					
47	12	W5/8L	Lock Washer					
48	8	W1/2L	Lock Washer			Patrio	t Equipment	This drawing, and the information hereon, are the
49	8	N1/2N	Hex Nut			1302 K	Road Minden, NE	a duction zed by doi on published fait right
50	6	B3/8x4.0	Hex Bolt			308-83	2-0220	reserved under the copyright laws.

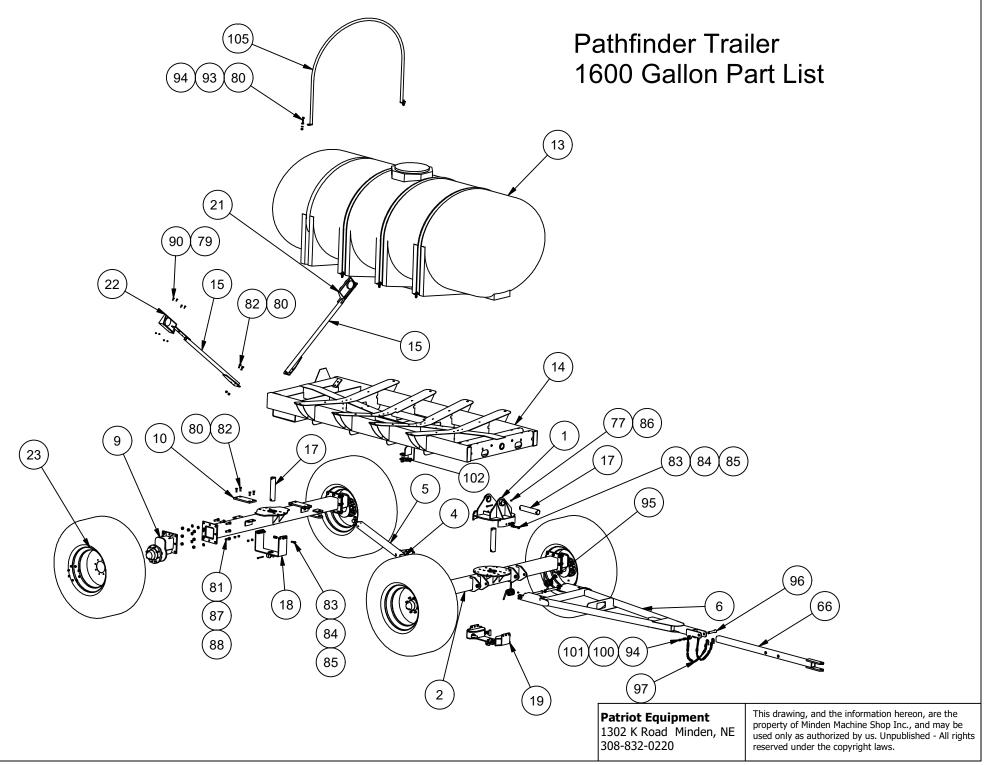

		Pathfinder Traile	er 1600 Gallon			Pathfinder Trail	er 1600 G	allon
ITEM	QTY	PART NUMBER	DESCRIPTION	ITEM	QTY	PART NUMBER		DESCRIPTION
1	1	PF-CP-A007	Front Fifth Wheel Adjustable	81	28	B3/4x2.5	Hex Bo	olt
2	1	PF-CP-A001	6x6 Front Axle Weldment	82	12	B1/2x1.5	Hex Bo	olt
3	1	PF-CP-A002	6x6 Rear Axle Weldment	83	12	B5/8x2.0	Hex Bo	olt
4	1	PF-CP-A015	2x2 Tie Tube Weldment	84	12	W5/8L	Lock V	Vasher
5	1	PF-CP-A016	2.5x2.5 Tie Tube Weldment	85	12	N5/8N	Hex N	ut
6	1	PF-CP-A021	Tongue Reciever Weldment	86	6	B3/8x4.0	Hex Bo	olt
9	4	PF-CP-A011	Axle Spindle Weldment	87	28	W3/4L	Lock V	Vasher
10	2	PFT4012	UHMW Axle Pad	88	28	N3/4N	Hex N	ut
13	1	T1600W	1600 Gallon Tank White	89	2	B5/16x1.5	Hex Bo	olt
13.1	1	T1600Y	1600 Gallon Tank Yellow	90	8	B1/4x1.0	Hex Bo	olt
14	1	PF-1600-A001	1600 Gallon Main Frame	93	8	B1/2x2.5	Hex Bo	olt
15	2	PF-CP-A014	Tail Light Bracket	94	20	W1/2F	Plain V	Vasher
17	3	PF-CP-P006	1 7_16 Pivot Pin	95	1	SP4003	Torsio	n Spring
18	1	PF-CP-A005	Rear Pivot Support Weldment	96	1	PFT4010	1" x 5"	Pin
19	1	PF-CP-A008	Front Pivot Support Weldment	97	1	TR1595	Safety	Chain
21	1	PFT4007L	Light Flasher Left	99	32	N1/2NY	Nylock	Nut
22	1	PFT4007R	Light Flasher Right	100	2	B1/2x2.0	Hex Bo	olt
23	4	PFT9141	17.5x24 Tire White Rim	101	2	N1/2L	Lock N	lut
23.1	4	PFT9142	17.5x24 Tire Yellow Rim	102	3	PFT4011	1' x 4"	Pin
23.2	1	PFT9143	Yellow Rim for 17.5x24 Tire	103	1	TR1590	Manua	I Holder
23.3	1	PFT9144	White Rim for 17.5x24 Tire	105	4	TR1610W-1	Hoop A	Assembly
23.4	4	PFT9121	380/85R38 Tire Yellow Rim					
23.5	4	PFT9122	380/85R38 Tire White Rim					
23.6	1	PFT9123	White Rim for 380/85R38 Tire					
23.7	1	PFT9124	Yellow Rim for 380/85R38 Tire					
50	2	PF-CP-A020	Tongue Pin Weldment					
66	1	PF-CP-A022	Tongue Extension 3 inch					
77	6	N3/8NY	Nylock Nut					
78	2	N5/16NY	Nylock Nut					
79	8	N1/4NY	Nylock Nut					
80	20	N1/2NY	Nylock Nut					
						Patriot Equip 1302 K Road M 308-832-0220		This drawing, and the information hereon, are the property of Minden Machine Shop Inc., and may be used only as authorized by us. Unpublished - All rig reserved under the copyright laws.

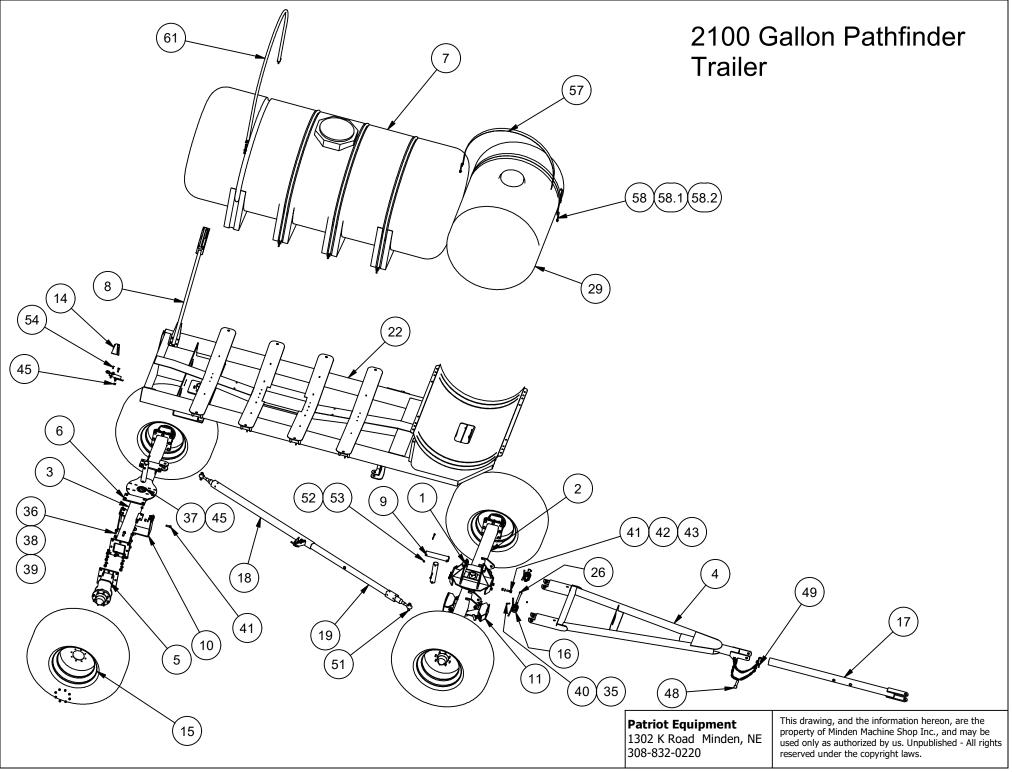


	2100 Pathfinder Trailer					2100 Pa	hfinder Trailer	
ITEM	QTY	PART NUMBER	DESCRIPTION	ITEM	QTY		DESCRIP	ΓΙΟΝ
1	1	PF-CP-A007	Front Fifth Wheel Adjustable	41	12	B5/8x2.0	Hex Bolt	
2	1	PF-CP-A001	6x6 Front Axle Weldment	42	12	N5/8N	Hex Nut	
3	1	PF-CP-A002	6x6 Rear Axle Weldment	43	12	W5/8L	Lock Washer	
4	1	PF-CP-A021	Tongue Reciever Weldment 3 1-2	44	20	W1/2F	Plain Washer	
5	4	PF-CP-A011	Axle Spindle Weldment	45	20	N1/2NY	Nylock Nut	
6	2	PFT4012	UHMW Axle Pad	46	10	B1/2x2.5	Hex Bolt	
7	1	T1600W	1610 Ell. Leg Tank White	48	1	PFT4010	1" x 5" Pin	
7.1	1	T1600Y	1610 Ell. Leg Tank Yellow	49	2	TR1595	Safety Chain	
8	2	PF-CP-A014	Tail Light Bracket	51	2	PFT4011	1" x 4" Pin	
9	3	PF-CP-P006	1-7/16 Pivot Pin	52	6	B3/8x4.0	Hex Bolt	
10	1	PF-CP-A005	Rear Pivot Support Weldment	53	6	N3/8NY	Nylock Nut	
11	1	PF-CP-A008	Front Pivot Support Weldment	54	8	B1/4x1.0	Hex Bolt	
13	1	PFT4007L	Light Flasher Left	55	8	N1/4NY	Nylock Nut	
14	1	PFT4007R	Light Flasher Right	56	32	N1/2N	Hex Nut	
15	4	PFT91101	19.5x24 Tires and Yellow Rims	57	2	PF-CP-P001	Tank Strap for 500 G	al. Tank
15.1	4	PFT91102	19.5x24 Tires and White Rims	58	4	ST100	J-Bolt	
15.2	1	PFT91107	White Rim	58.1	4	W1/2L	Lock Washer	
15.3	1	PFT91108	Yellow Rim	58.2	4	N1/2N	Hex Nut	
15.4	1	PFT9121	380/85R38 Tire and Yellow Rim	59	1	TR1590	Manual Holder	
15.5	1	PFT9122	380/85R38 Tire and White Rim	61	4	TR1610W-1	Tank Hoop	
15.6	1	PFT9123	White Rim					
15.7	1	PFT9124	Yellow Rim					
16	2	SP4003	Torsion Spring					
17	1	PF-CP-A022	Tongue Extension 3 inch					
18	1	PF-CP-A016	2.5x2.5 Tie Tube Weldment					
19	1	PF-CP-A019	2x2 Tie Tube Weldment					
22	1	PF-2100-A001	2100 Gallon Pathfinder Main Frame					
26	2	PF-CP-A020	Tongue Pin Weldment					
29	1	T13	500 Gallon Tank White					
29.1	1	T13Y	500 Gallon Tank Yellow					
35	2	N5/16NY	Nylock Nut					
36	28	B3/4x2.5	Hex Bolt					
37	12	B1/2x1.5	Hex Bolt					
38	28	N3/4N	Hex Nut					
39	28	W3/4L	Lock Washer			Г		This drawing, and the information hereon, are the
40	2	B5/16x1.5	Hex Bolt				Patriot Equipment .302 K Road Minden, NE	property of Minden Machine Shop Inc., and may be
				•			08-832-0220	used only as authorized by us. Unpublished - All right reserved under the copyright laws.

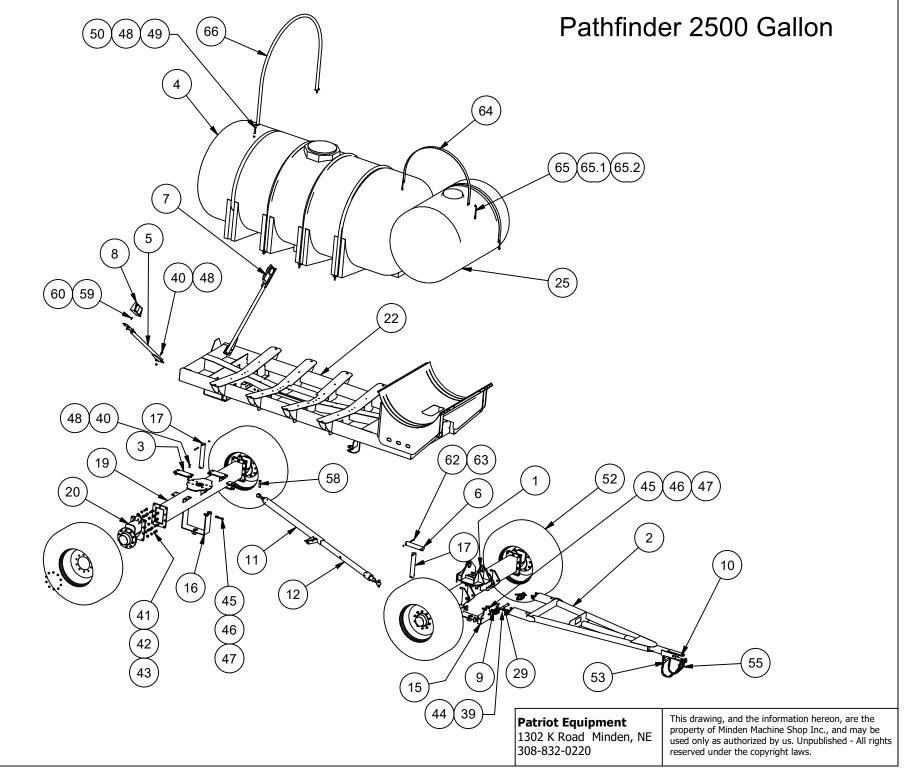


			n Pathfinder			2500 Gallo	n Pathfi	nder	
ITEM	QTY	PART NUMBER	DESCRIPTION	ITEM	QTY	PART NUMBER		DESCRIPTION	
1	1	PF-CP-A007	Front Fifth Wheel Adjustable	52	4	PFT91103	19.5x24	4 Tire Yellow Rim	
2	1	PF-CP-A021	Tongue Reciever 3 1-2	52.1	4	PFT91104	19.5x2	4 Tire White Rim	
3	2	PFT4012	Axle Pad	52.2	1	PFT91105	White F	Rim	
4	1	T2010Y	2010 Gal. El. Leg Tank Yellow	52.3	1	PFT91106	Yellow	Rim	
4.1	1	T2010W	2010 Gal. El. Leg Tank White	53	1	PFT4010	1" x 5"	Pin	
5	2	PF-CP-A014	Tail Light Bracket Heavy	54	2	TR1595	Safety	Chain	
6	1	PF-CP-P006	1 7_16 Pivot Pin	56	2	B1/2x2.0	Hex Bo	olt	
7	1	PFT4007L	Light Flasher Left	57	2	N1/2L	Lock N	ut	
8	1	PFT4007R	Light Flasher Right	58	2	PFT4011	1"x4" P	lin	
9	2	SP4003	Torsion Spirng	59	8	B1/4x1.0	Hex Bo	olt	
10	1	PF-CP-A022	Tongue Extension 3 inch	60	8	N1/4NY	Nylock	Nut]
11	1	PF-CP-A016	2.5x2.5 Tie Tube Weldment	61	40	N1/2NY	Nylock	Nut	
12	1	PF-CP-A019	2x2 Tie Tube Weldment	62	6	B3/8x4.0	Hex Bo	olt	
15	1	PF-CP-A009	6x10 Front Pivot Support	63	6	N3/8NY	Nylock	Nut	
16	1	PF-CP-A006	6x10 Rear Pivot Support	64	2	PF-CP-P001	Tank S	trap for 500 Gal. Tank	
17	2	PF-CP-P015	1 7_16 Pivot Pin 6x10	65	4	ST100	J-Bolt		
18	1	PF-CP-A003	6x10 Front Axle Weldment	65.1	4	W1/2L	Lock W	/asher	
19	1	PF-CP-A004	6x10 Rear Axle Weldment	65.2	4	N1/2N	Hex Nu	ıt	
20	4	PF-CP-A013	Axle Spindle Weldment 6x10	66	4	With Tank	Tank H	оор	
22	1	PF-2500-A001	2500 Gal. PF Main Frame	67	1	TR1590	Manua	l Holder	
25	1	T13	500 Gal. Tank White		•				-
25.1	1	T13Y	500 Gal. Tank Yellow						
29	2	PF-CP-A020	Tongue Pin Weldment						
39	2	N5/16NY	Nylock Nut						
40	12	B1/2x1.5	Hex Bolt						
41	40	B3/4x2.5	Hex Bolt						
42	40	W3/4L	Lock Washer						
43	40	N3/4N	Hex Nut						
44	2	B5/16x1.5	Hex Bolt						
45	12	B5/8x2.0	Hex Bolt						
46	12	W5/8L	Lock Washer]					
47	12	N5/8N	Hex Nut						
48	20	N1/2NY	Nylock Nut	1					
49	8	B1/2x2.5	Hex Bolt	1					
50	20	W1/2F	Plain Washer]					This drav
			·					Patriot Equipment 1302 K Road Minden, NE 308-832-0220	property used onl reserved

This drawing, and the information hereon, are the property of Minden Machine Shop Inc., and may be used only as authorized by us. Unpublished - All rights reserved under the copyright laws.

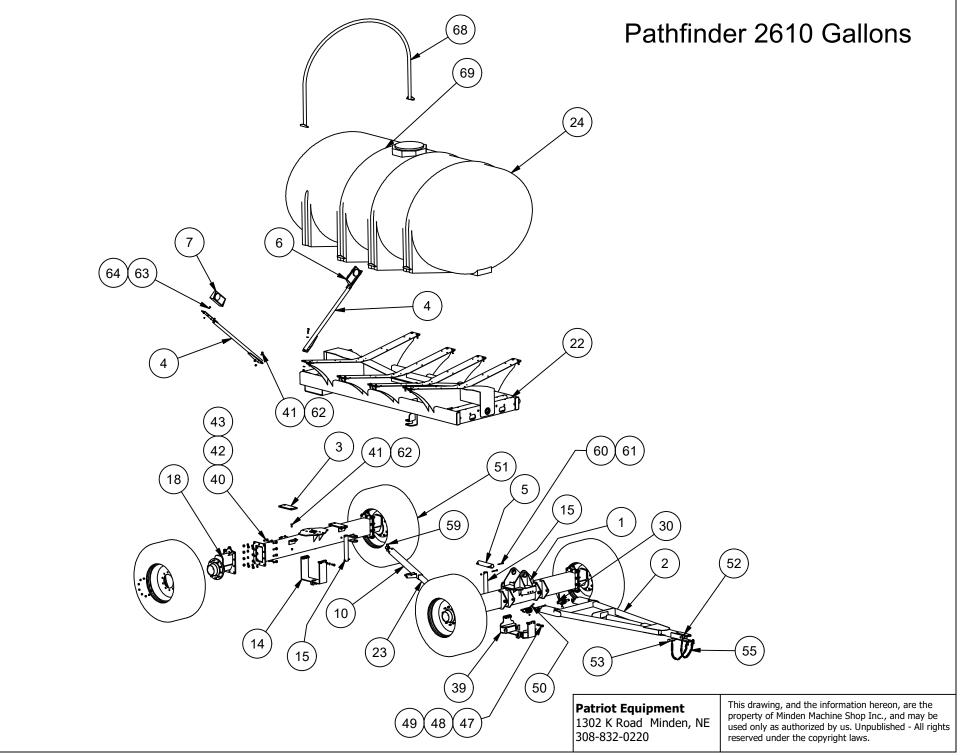

Pathfinder 2610					Pathfinder 2610						
ITEM	QTY	PART NUMBER	DESCRIPTION	DESCRIPTION TIEM QTY NUMB		PART NUMBER	DESCRIPTION				
1	1	PF-CP-A007	Front Fifth Wheel Adjustable	51	4	PFT91103	19.5x24 Tire Yellow Rim				
2	1	PF-CP-A021	Tongue Reciever 3 1-2	51.3	3 4 PFT91104 19.5x24 Tire		19.5x24 Tire White Rim				
3	2	PFT4012	Axle Pad	51.4	1	PFT91105	White Rim				
4	2	PF-CP-A014	Tail Light Bracket	51.5	1	PFT91106	Yellow Rim				
5	1	PF-CP-P006	1 7_16 Pivot Pin	52	1	PF-CP-A022	Tongue Extension 3 inch				
6	1	PFT4007L	Light Flasher Left	53	1	PFT4010	1" x 5" Pin				
7	1	PFT4007R	Light Flasher Right	54	1	TR1595	Safety Chain				
8	2	SP4003	Torsion Spring	56	36	W1/2F	Plain Washer				
10	1	PF-CP-A016	2.5x2.5 Tie Tube	57	2	B1/2x2.0	Hex Bolt				
14	1	PF-CP-A006	6x10 Rear Pivot Support	58	2	N1/2L	Lock Nut				
15	2	PF-CP-P015	1 7_16 Pivot Pin 6x10	59	2	PFT4011	1"x4" Pin				
16	1	PF-CP-A003	6x10 Front Axle Weldment	60	6	B3/8x4.0	Hex Bolt				
17	1	PF-CP-A004	6x10 Rear Axle Weldment	61	6	N3/8NY	Nylock Nut				
18	4	PF-CP-A013	Axle Spindle Weldment 6x10	nt 6x10 62 28		N1/2NY	Nylock Nut				
22	1	PF-2610-P001	2610 Gal. PF Main Frame	63	8	B1/4x1.0	Hex Bolt				
23	1	PF-CP-A015	2x2 Tie Tube Weldment	64	8	N1/4NY	1/4 Std NC Nylock Nut				
24	1	T2610Y	2610 El. D.L.T Yellow	65	16	B1/2x2.5	Hex Bolt				
24.1	1	T2610W	2610 EI.D.L.T White	66	1	TR1590	Manual Holder				
30	2	PF-CP-A020	Tongue Pin Weldment	68	2	With Tank	2610 Short Band				
39	1	PF-CP-A009	6x10 Front Pivot Support	69	2	With Tank	2610 Long Band				
40	40	B3/4x2.5	Hex Bolt	70	2	N5/16NY	Nylock Nut				
41	12	B1/2x1.5	Hex Bolt	71	40	N1/2NY	Nylock Nut				
42	40	W3/4L	Lock Washer								
43	40	N3/4N	Hex Nut]							
44	2	B5/16x1.5	Hex Bolt								
47	12	B5/8x2.0	Hex Bolt]							
48	12	N5/8N	Hex Nut]							
49	12	W5/8L	Lock Washer								

Patriot Equipment 1302 K Road Minden, NE 308-832-0220

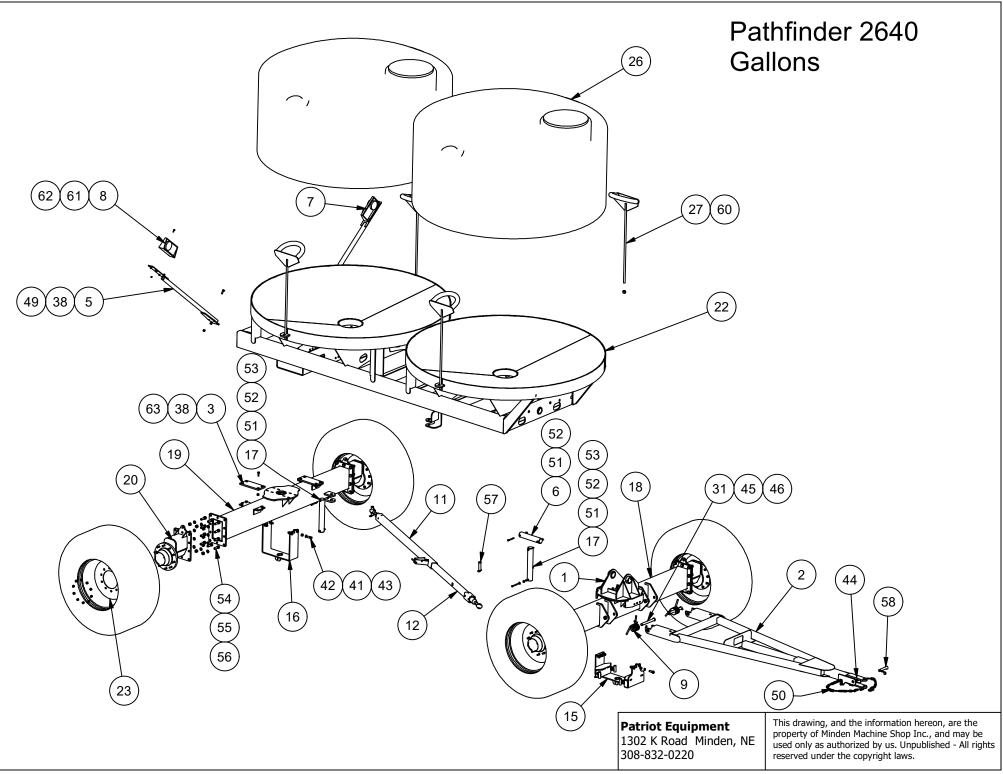

Pathfinder 2640					Pathfinder 2640					
ITEM	QTY	PART NUMBER	DESCRIPTION	ITEM QTY		PART NUMBER	DESCRIPTION			
1	1	PF-CP-A007	Front Fifth Wheel Adjustable	46	2	N5/16NY	Nylock Nut			
2	1	PF-CP-A021	Tongue Reciever 3 1-2	47	2	B1/2x2.0	Hex Bolt			
3	2	PFT4012	Axle Pad	48	2	W1/2F	Plain Washer			
5	2	PF-CP-A014	Tail Light Bracket	Tail Light Bracket 49 14 N1/2NY 1/2 Std		1/2 Std NC Nylock Nut				
6	1	PF-CP-P006	1 7_16 Pivot Pin	50	2	TR1595	Safety Chain			
7	1	PFT4007L	Light Flasher Left	51	6	B3/8x4.0	Hex Bolt			
8	1	PFT4007R	Light Flasher Right	52	6	N3/8NY	Nylock Nut			
9	2	SP4003	Torsion Spring	53	4	W3/8F	Plain Washer			
11	1	PF-CP-A016	2.5x2.5 Tie Tube	54	40	B3/4x2.5	Hex Bolt			
12	1	PF-CP-A015	2x2 Tie Tube	55	40	W3/4L	Lock Washer			
15	1	PF-CP-A009	6x10 Front Pivot Support	56	40	N3/4N	Hex Nut			
16	1	PF-CP-A006	6x10 Rear Pivot Support	57	2	PFT4011	1"x4" Pin			
17	2	PF-CP-P015	1 7_16 Pivot Pin 6x10	58	1	PFT4010	1" x 5" Pin			
18	1	PF-CP-A003	6x10 Front Axle Weldment	60	4	N3/4NY	Nylock Nut			
19	1	PF-CP-A004	6x10 Rear Axle Weldment	61	8	N1/4NY	Nylock Nut			
20	4	PF-CP-A013	Axle Spindle 6x10	62	8	B1/4x1	Hex Bolt			
22	1	PF-2640-A002	Main Frame For 2640	63	13	N1/2NY	Nylock Nut			
23	4	PFT91103	19.5x24 Tire Yellow Rim			•				
23.1	4	PFT91104	19.5x24 Tire White Rim							
23.2	1	PFT91105	White Rim							
23.3	1	PFT91106	Yellow Rim							
26	2	T1320B	1320 Gal. Cone Tank							
27	4	Tie Down	Supplied with Tank							
31	2	PF-CP-A020	Tongue Pin Weldment							
38	12	B1/2x1.5	Hex Bolt							
41	12	N5/8N	Hex Nut							
42	12	B5/8x2.0	Hex Bolt							
43	12	W5/8L	Lock Washer							
44	1	PF-CP-A022	Tongue Extension 3 inch							
45	2	B5/16x1.5	Hex Bolt							

Minden Machine Shop Inc LIMITED WARRANTY

Minden Machine Shop Inc warrants all products manufactured by it to be free of defect in material and workmanship for a period of one (1) year from the date of purchase.

This Minden Machine Shop Inc. warranty does not cover:

- 1. Parts and accessories supplied by Minden Machine Shop Inc. but manufactured by others. Minden Machine Shop Inc. will facilitate the other manufacturer warranty for the benefit of the purchaser but will not be bound thereby (example: augers, motors, trailers, tanks, etc.).
- 2. Products that have been altered by anyone other than a Minden Machine Shop Inc. employee or are used by the purchaser, for purposes other than what was intended at time of manufacture or used in excess of the "built specifications".
- 3. Products that are custom manufactured by Minden Machine Shop Inc. utilizing the purchaser's design which deviates from Minden Machine Shop Inc. normal production line manufactured or customized features of the products.
- 4. Malfunctions or damages to the product from misuse, negligence, customer alteration, accidents or product abuse due to incoming material or poor material flow ability or lack of required performance or required maintenance (e.g., poor material flow ability caused by incoming wet fertilizer or hot soybean meal, etc).
- 5. Loss of time, inconvenience, loss of material, down time or any other consequential damage.
- 6. Product use for a function that is different than designed intent (e.g., storing soybean meal in grain bin, unacceptable material in the bin such as hot bean meal when product originally designed for other application, etc).
- 7. Minden Machine Shop Inc is not responsible for any equipment that this product is attached to or mounted on.

To activate this warranty, the purchaser must make contact in writing with Minden Machine Shop Inc. with in one (1) year of date of purchase. After contact, Minden Machine Shop Inc. has the right to determine the cause and qualify the legitimacy of the claim. Minden Machine Shop Inc., upon acceptance of a warranty claim, shall have a reasonable time to plan any repair or replacement and may affect repair or replacement out of its factory or through contract with a local repair service. If a purchaser after warranty notice is made, chooses to make the repair itself, Minden Machine Shop Inc. must approve any expenses before they are incurred to be responsible for customer reimbursement. Minden Machine Shop Inc. shall be liable on a warranty claim for repair or replacement of any defective products and this is the purchaser's sole and exclusive remedy. Minden Machine Shop Inc. will not be liable for any other or further remedy including claims for personal injury, property damage or consequential damage. The law of the Sate of Nebraska shall govern and any such claim and any issues with regard to the same shall be resolved in the Nebraska District Court for the county of Kearney.

RETURN OF MERCHANDISE

Merchandise may not be returned without written approval from the factory. All returns must have a return authorization number. Obtain this number before the return and show it on all return items. A 15% restocking charge is made on merchandise returned. Returned merchandise must be shipped pre-paid.

RECEIVING MERCHANDISE AND FILING CLAIMS

When receiving merchandise it is important to check both the number of parts and their description with packing slip. The consignee must make all claims for freight damage or shortage within 10 days from the date of delivery.

When the material leaves the factory it becomes the property of the consignee. It is the responsibility of the consignee to file a claim on any possible damage or loss. Please list your preferred routing on purchase orders.

MODIFICATIONS

It is the policy of Minden Machine Shop Inc. to improve its products whenever possible and practical to do so. We reserve the right to make changes, improvements and modifications at any time without incurring the obligation to make such changes, improvements and modifications on any equipment sold previously.

WARRANTY REGISTRATION

To register equipment, or file a claim, copy and paste the words on this page into an email or word document, fill out the appropriate information completely, and email it to <u>larry@mindenmachine.com</u> with the subject as EQUIPMENT WARRANTY, or fill it out and fax it to 308-832-1340.

Dealer Information:

Not Applicable, check here: []

Dealer Name: Address: City: State: Zip Code: Phone #: Email:

End User Information:

Purchaser: Address: City: State: Zip Code: Phone #: Email:

Equipment: Serial #: Date Of Purchase: / /

Equipment: Trailer Model Number: Trailer VIN Number: Date Of Purchase: / / Dealer Name:

TIRE IDENTIFICATION NUMBERS

QTY	1	2	3	4	5	6	7	8	9	10	11	12
1												
2												
3												
4												
5												
6												
7												
8												

Please return within 14 days of purchase

CLAIM FILE

Defect: