



## **Implement Mount Tanks**

### **Owner's Manual**



**Manufactured by  
Minden Machine Shop Inc.  
1302 K Road  
Minden NE 68959  
1-308-832-0220**

# Table of Contents

Introduction	3
Safety and Operation Rules	4
Safety Decals	8
Operation	9
Storage and Maintenance	9
HT-IM1	10
HT-IM2	11
HT-IM3	12
HT-IM4	13
HT-IM5	14
HT-IM6	15
HT-IM7	16
HT-IM8	17
HT-IM9	18
HT-IM11	19
Bolt Torque Table	20
Warranty	21

## INTRODUCTION

Thank you for purchasing a Patriot Implement Mount Tank! The product has been designed to hold liquids for the implement it is mounted on. All product users must read and understand this manual prior to equipment operation. This manual is considered part of your machine and should remain with the machine at all times. Do not allow anyone to operate or maintain this equipment if they have not fully read and comprehended this manual. Failure to follow the recommended procedures may result in personal injury or death or equipment damage.

Information in this manual is designed to help owners and operators to obtain the best results and safe operation from their investment. The life of any machine depends largely on the care it is given and we suggest that the manual should be read and understood and referred to frequently. If for any reason you do not understand the instructions and safety requirements, please contact your authorized dealer. The intent of this manual is to provide guidelines to cover general use and to assist in avoiding accidents and injuries.

There may be times when circumstances occur that are not covered in the manual. At those times it is best to use common sense and contact your authorized dealer or our factory.

The requirements of safety cannot be emphasized enough in this publication. We urge you to make safety your top priority when using and maintaining the equipment. We strongly advise that anyone allowed to operate this equipment be thoroughly trained and tested, to prove they understand the fundamentals of safe operation.

Some photographs, diagrams or illustrations in this manual may show doors, guards and shields opened or removed to aid in clarity and understanding of a particular procedure. All guards, shields and safety devices must be in their proper position prior to operation.

# SAFETY AND OPERATION RULES

## General Safety Statements

Safety precautions are essential when the use of any mechanical equipment is involved. These precautions are necessary when using, storing, and servicing mechanical equipment. Using this equipment with the respect and caution demanded will considerably lessen the possibilities of personal injury. If safety precautions are overlooked or ignored, personal injury or property damage may occur.

The machine was designed for a specific application. It should not be modified and/or used for any application other than which it was designed. If there are any questions regarding its application, please write or call. Do not use this unit until you have been advised. For more information contact:

Patriot Equipment  
1302 K Rd  
Minden, NE 68959  
308-832-0220

Read this entire manual carefully. Know your equipment. Consider the application, limitations, and the potential hazards specific to your unit. Operator and bystander safety is of prime concern to us. This manual was written with the safety of the operator and others who come in contact with the equipment. This manual was written to help you understand the safe operating procedures of the product. We want you as our partner in safety. A copy of this manual should be available to all persons who may operate this machine.

It is your responsibility as an owner, operator, or supervisor to know what specific requirements, precautions, and work hazards exist and to make these known to all other personnel working with the equipment or in the area, so that they too may take any necessary safety precautions that may be required. Avoid any alterations of the equipment. Such alterations may create a dangerous situation where serious injury or death may occur and will void warranty.

Why is SAFETY important? Three reasons:

1. Accidents disable and kill
2. Accidents cost money
3. Accidents can be avoided

Note the use of the signal words **DANGER**, **WARNING**, and **CAUTION** with safety messages. The appropriate signal word for each message has been selected using the following guidelines:

**DANGER:** An immediate and specific hazard which will result in severe personal injury or death if proper precautions are not taken.

**WARNING:** A specific hazard or unsafe practice which could result in severe personal injury or death if proper precautions are not taken.

**CAUTION:** Unsafe practices which could result in personal injury if proper precautions are not taken or a reminder of good safety practices.

## Safety Alert Symbol



**BE ALERT! YOUR SAFETY IS INVOLVED!**

The symbol shown above is used to call your attention to instructions concerning your personal safety. Watch for this symbol – It points out important safety precautions. The symbol means: ATTENTION! BECOME ALERT! YOUR PERSONAL SAFETY IS INVOLVED! Read the message that follows and be alert to the possibility of personal injury or death.

Read this manual before operating or working around the equipment! This manual must be delivered with the equipment to its owner and operator. Failure to read this manual and its safety instructions is a misuse of equipment.

## Safety Equipment

Please, remember safety equipment provides important protection for persons around a machine that is in operation. Be sure ALL safety shields and protective devices are installed and properly maintained. If you find any shields or guards damaged or missing, contact Patriot Equipment for the correct items.

## Safety Procedures



1. Use only the correct equipment with the proper capacity when installing or removing the Implement Mounted Tank Mounts.
2. Use the correct pumping equipment when filling the tanks. Be cautious to not fill the tanks too quickly as damage could occur to the lids or the tanks.
3. Inspect tank straps for correct tension before use.
4. Inspect tank supports for any cracked welds and loose fasteners.
5. Do not operate unit without safety shields or guards in place.
6. IMPORTANT: Use caution when transporting. Be alert of the transport unit's overall width when approaching obstacles, such as post sign and poles, along the road. Check the transport width of the unit to ensure clearance before entering.
7. Comply with all safety warnings and cautions in this manual as well as the operator's manuals of any tow vehicles that may be used.
8. Do not allow any riders on the machine.
9. In case of any defect or awareness of potential danger, please contact Patriot Equipment at 1-308-832-0220 immediately.
10. Follow all manufacturer safety guidelines for handling fertilizers and chemicals.

## Operator Qualifications



Operation of the implement tanks on the machine shall be limited to competent and experienced persons. In addition anyone who will operate or work around the machine must use good common sense. In order to be qualified, they must also know and meet all other requirements, such as:

1. Some regulations specify that no one under the age of 18 may operate power machinery. It is your responsibility to know what these regulations are in your own area or situation.
2. Current Occupational Safety Health Administration regulations state in part: "At the time of initial assignment and at least annually thereafter, the employer shall instruct every employee or user in the safe operation and servicing of all equipment with which the employee or user is, or will be involved."
3. Unqualified persons are to stay out of the work area.
4. A person who has not read and understood all operating and safety instruction is not qualified to operate the machine.

## Safety Overview

YOU are responsible for SAFE operation and maintenance of the implement tanks on the machine. YOU must ensure that you and anyone who is going to operate and maintain or work around the machine must be familiar with the operating, maintenance, and safety information contained in the manual.

Remember YOU are the key to safety. GOOD PRACTICES protect not only you but also the people around you. Make these practices a working part of your safety program. Be certain EVERYONE operating this machine is familiar with the procedures recommended and follows safety precautions. Remember, most accidents can be prevented. Do not risk injury or death by ignoring any information addressed.

Machine owners must give operating instructions to operators before allowing them to operate the machine with the implement tanks. They must be reviewed at least annually thereafter per OSHA regulation 1928.57.

The most important safety device on the equipment is a SAFE OPERATOR. It is the operator's responsibility to read and understand ALL instructions in the manual and to follow them. All accidents can be avoided!

Any person who has not read and understood all operation and safety instructions is not qualified to operate the machine. An untrained operator exposes himself and bystanders to possible serious injury or death.

Do not modify the equipment in any way. Unauthorized modifications may impair the functions and/or safety and could affect the life of the equipment.

## Safety Affirmation

1. I have read and understand the operator's manual and all safety signs before operation, maintenance, adjusting, or unplugging the machine.
2. I will allow only trained persons to operate the machine. \*An untrained operator is not qualified to operate this equipment.
3. I have access to a fire extinguisher.
4. I have all guards in place and will not operate the machine without them.
5. I will not allow riders on the machine.
6. I understand the danger of moving parts (rotating parts, hydraulics, and pinch points) and will stop engine before servicing.
7. I recognize the danger of the machine coming in contact with power lines.
8. I have the safety lock up pins and know and understand where and when to use them.
9. I understand that any accidents that occur with the machine are my responsibilities.
10. I understand that Patriot Equipment will not be held responsible for any accidents that involve the implement tanks mounted on a machine or the machine.

## Sign Off Sheet

(This sheet should be signed annually as part of your safety program)

As a requirement of OSHA, it is necessary for the owner/employer to train the employee in the safe operation and safety procedures with this machine. We include this sign off sheet for your convenience and personal record keeping.

DATE	EMPLOYER SIGNATURE	EMPLOYEE SIGNATURE

## **Machine Inspection**

After delivery of your new implement tanks and/or completion of assembly, and before each use, inspection of the implement tanks is mandatory. This inspection should include, but not be limited to:

1. Check to see that all guards are in place, secured and functional.
2. That all fasteners are tight.
3. That all tank straps are secured correctly and to the correct tension.
4. Check that the tanks are clean and in good working order before filling them with chemicals or fertilizer.
5. Inspect all tank plumbing for fertilizer or chemicals for any damage or leaks.

## **Lighting and Marking**

It is the responsibility of the customer to know the lighting and marking requirements of the local highway authorities and to install and maintain the equipment to provide compliance with the regulations. Add extra lights when transporting at night or during periods of limited visibility if necessary.

## **Serial Number**

To ensure efficient and prompt service, please furnish us with the model and serial number of the machine in all correspondence or other contact. The serial number is located on a visible location of the machine.

## **Safety Decals**

1. Keep safety decals clear and legible at all times.
2. Replace decals and signs that are missing or have become unreadable.
3. Safety signs are available from your Dealer or the Manufacturer.

## **How to install Safety Decals**

1. Be sure that the installation area is clean and dry.
2. Decide on the exact position before you remove the backing paper.
3. Align the decal over the specified area and carefully press the small portion with the exposed sticky backing in place.
4. Slowly peel back the remaining paper and carefully smooth the remaining portion of the decal in place.
5. Small air pockets can be pierced with a pin and smoothed out using a piece of decal backing paper.

## **Operation**







The Implement Mount Tank Mounts serve only to provide a mount for a tank on an implement. Select an area to mount the tanks and check the area so that all fasteners can be tightened and product hoses can be ran neatly and efficiently. Some of the tank mounts are designed to fit within a specific area of the tool bar. Clean the area where the tank will be mounted and torque all the mounting bolts when initially mounting the Implement Tank Mount. After the first fill of the tank, check all tank straps to be sure they are tightened correctly. Also, check the Implement Tank Mount bolts to make sure they are tight after the first tank fill. Again, after the first 50 hours of use, check all associated fasteners and make sure they are the correct torque. With the first fill and the first 50 hours of use, the additional weight of the product in the tanks can cause shifting as all the components settle into place under the additional loads they experience.

## **Storage/Maintenance**

After operations are completed with the Implement Mount Tank:

1. The equipment should be cleaned to remove any chemical or fertilizer residue. Please follow all local regulations when cleaning out tanks and associated equipment.
2. Remove any loose paint and recoat the surface with paint if needed.
3. Inspect the equipment for any cracks or deformities and repair if any are found.
4. Check the tank straps for tightness and adjust as needed.
5. Inspect the tanks for any damage.
6. Inspect the plumbing for any leaks or damage and repair.
7. Inspect fasteners and tighten any that have become loose or replace any that are damaged or oxidized.

HT-IM1 Tank Mount Assembly  
Fits the John Deere 1720 CCS Planter

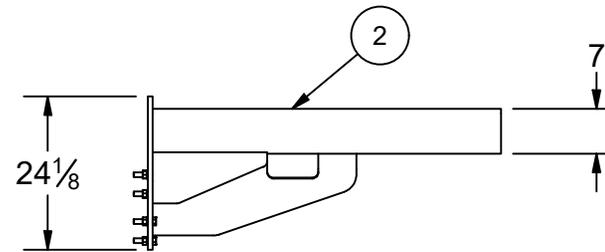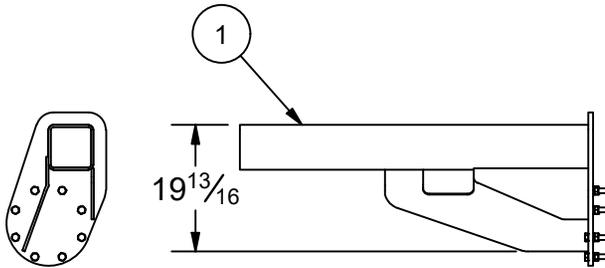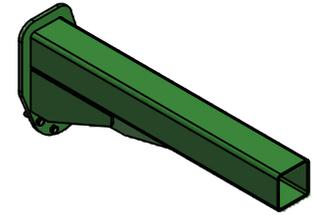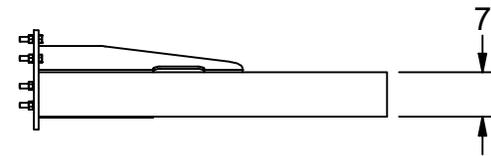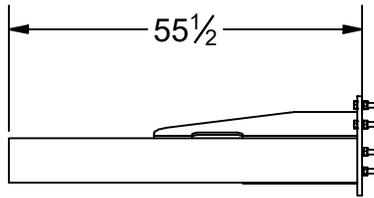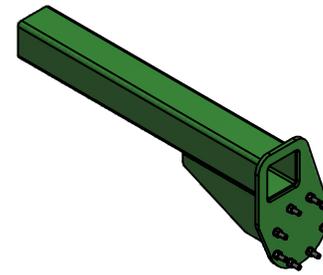

The tank mounts can be used with:  
200 gallon tank and saddle (38" Diameter Tank)  
300 gallon tank and saddle (38" Diameter Tank)

Tanks and saddles are sold separately.



The tank mounts are mounted here

Parts List

ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	HT-IM1-A01	Offset Tank Asm
2	1	HT-IM1-A02	offset Tank Asm LH

**Patriot Equipment**  
1302 K Road Minden, NE  
308-832-0220





This drawing, and the information hereon, are the property of Minden Machine Shop Inc., and may be used only as authorized by us. Unpublished - All rights reserved under the copyright laws.

# HT-IM2 Planter Tongue Mount

Fits the Case/IH Planter 1250 and 1260

Mount can be used with:  
 200 Gallon Tank (38" Diameter) and Saddle  
 300 Gallon Tank (38" Diameter) and Saddle  
 400 Gallon Tank (42" Diameter) and Saddle  
 500 Gallon Tank (48" Diameter) and Saddle

Tanks and Saddles are sold separately.

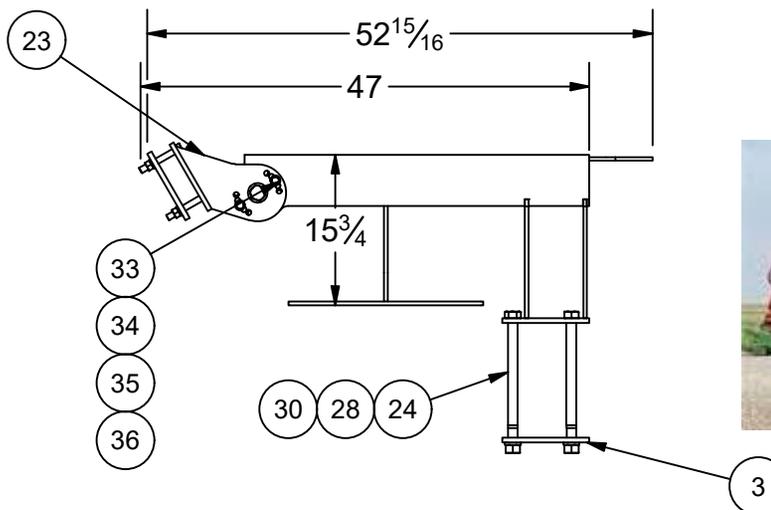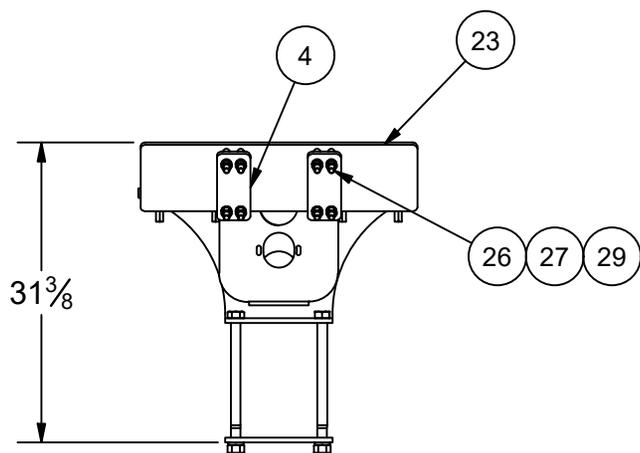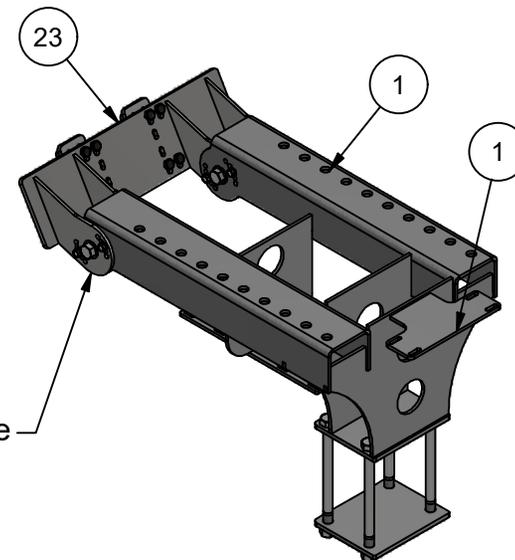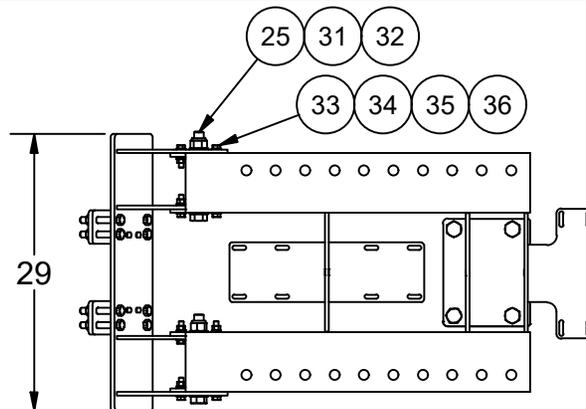

### Parts List

ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	HT-IM2-A01	Case Planter Saddle Base Frame Weldment
3	1	HT-IM2-P11	Clamp plate
4	2	HT-IM2-P07	Base Clamp Plate
23	1	HT-IM2-A02	Adjustment Plate Weldment
24	4	B1x14	Hex Bolt
25	4	B1x2.75	Hex Bolt
26	8	B5/8x4.5	Hex Bolt
27	8	W5/8L	Lock Washer
28	4	W1L	Lock Washer
29	8	N5/8N	Hex Nut

### Parts List

ITEM	QTY	PART NUMBER	DESCRIPTION
30	4	N1N	Hex Nut
31	8	W1F	Plain Washer
32	4	N1NYL	1 Std NC Nylock Nut
33	8	B1/2x2	Hex Bolt
34	8	W9/16L	Lock Washer
35	16	W1/2F	Plain Washer
36	8	N1/2N	Hex Nut



**Patriot Equipment**  
 1302 K Road Minden, NE  
 308-832-0220

This drawing, and the information hereon, are the property of Minden Machine Shop Inc., and may be used only as authorized by us. Unpublished - All rights reserved under the copyright laws.

HT-IM3 Mount Assembly  
Fits Case 1255 12 and 16 row Planter

The HT-IM3 can be mounted with:  
200 gallon (38" Diameter) tank and saddle  
300 gallon (38" Diameter) tank and saddle  
400 gallon (42" Diameter) tank and saddle  
500 gallon (48" Diameter) tank and saddle

Tanks and Saddles are sold separately.

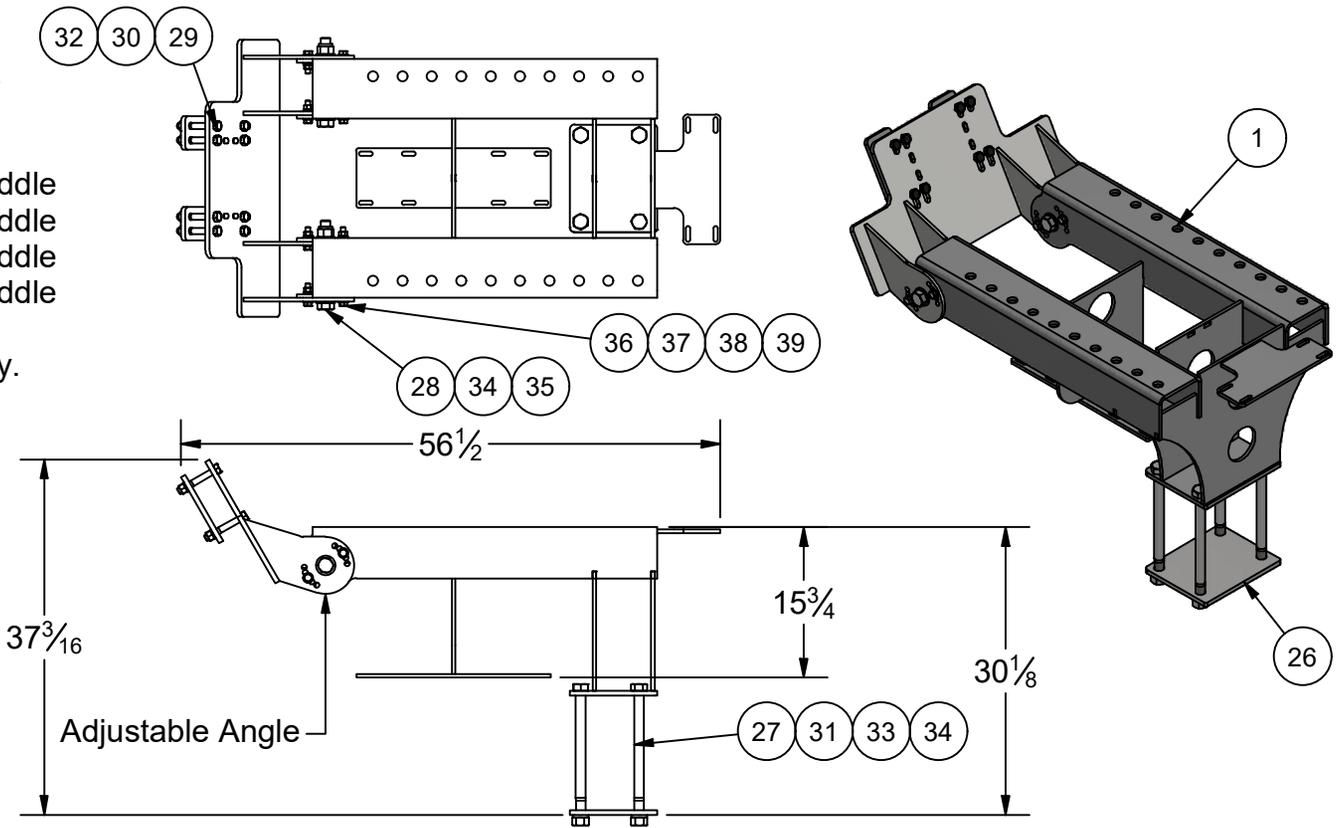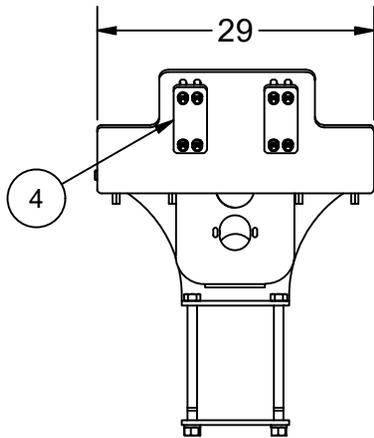

Parts List				Parts List			
ITEM	QTY	PART NUMBER	DESCRIPTION	ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	HT-IM3-A01	Base Frame Weldment	34	8	W1F	Plain Washer
4	2	HT-IM3-P11	Clamp Plate	35	4	N1NYL	1 Std NC Nylock Nut
23	1	HT-IM3-A02	Adjustment Plate	36	8	B1/2x2	Hex Bolt
26	1	HT-IM3-P12	8x12 Clamp Plate	37	8	W9/16L	Lock Washer
27	4	B1X14	Hex Bolt	38	16	W1/2F	Plain Washer
28	4	B1X2.75	Hex Bolt	39	8	N1/2N	Hex Nut
29	8	B5/8X4.5	Hex Bolt				
30	8	W5/8L	Lock Washer				
31	4	W1L	Lock Washer				
32	8	N5/8N	Hex Nut				
33	4	N1N	Hex Nut				

**Patriot Equipment**  
1302 K Road Minden, NE  
308-832-0220




This drawing, and the information hereon, are the property of Minden Machine Shop Inc., and may be used only as authorized by us. Unpublished - All rights reserved under the copyright laws.

# HT-IM4 Inline Planter Tongue Mount





Can be used with:

- 300 gallon (38" Diameter) tank
- 400 gallon (42" Diameter) tank
- 500 gallon (48" Diameter) tank

Tanks and Saddles are sold separately.

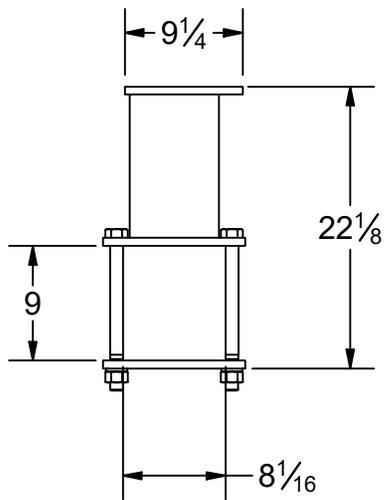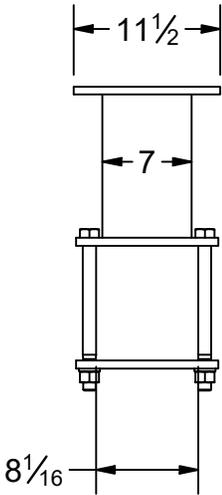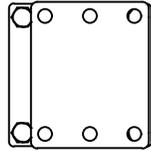

Tank saddles will mount here and bolt into place. Multiple holes are provided to give best fit for numerous combinations.

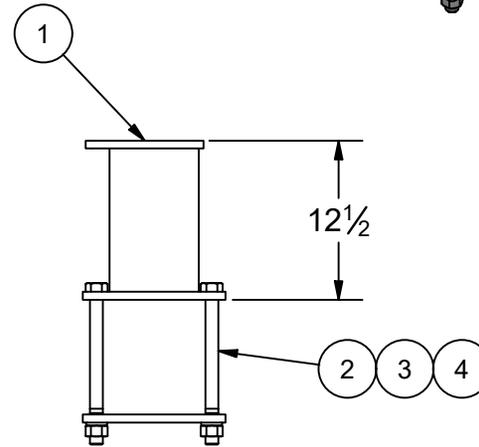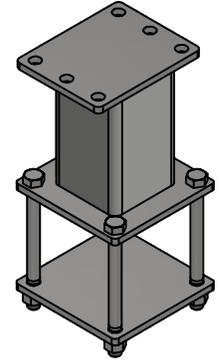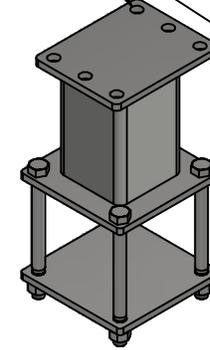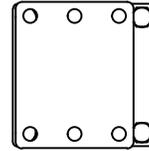

## Parts List

ITEM	QTY	PART NUMBER	DESCRIPTION
1	2	HT-IM4-A01	IM4 Weldment
2	8	B1X12	Hex Bolt
3	8	W1L	Lock Washer
4	8	N1N	Hex Nut





**Patriot Equipment**  
 1302 K Road Minden, NE  
 308-832-0220

This drawing, and the information hereon, are the property of Minden Machine Shop Inc., and may be used only as authorized by us. Unpublished - All rights reserved under the copyright laws.

HT-IM5 Tank Mount  
Mounts to the Case 1255 Planter Tongue with No  
Bulk Fill

Mount can be used with:  
200 gallon (38" Diameter) Tank  
300 gallon (38" Diameter) Tank  
400 gallon (42" Diameter) Tank  
500 gallon (48" Diameter) Tank

Tanks and Saddles are sold separately

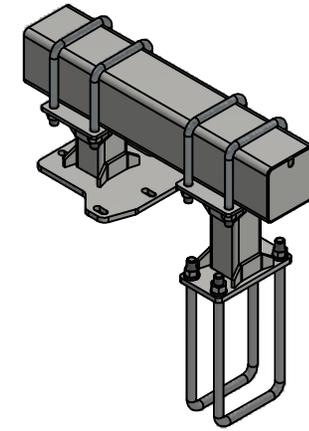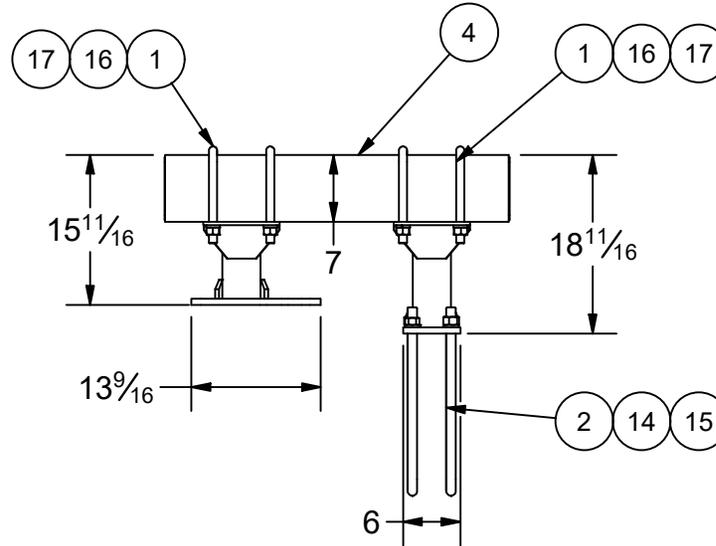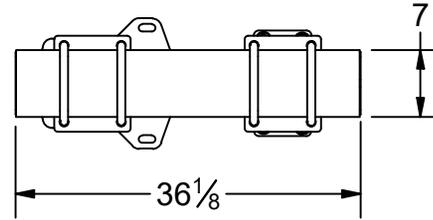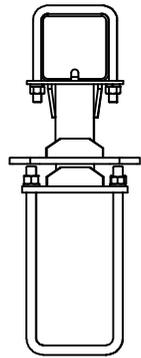

Parts List

ITEM	QTY	PART NUMBER	DESCRIPTION
1	4	ST115	7/8" U bolt 7" x 9"
2	2	ST130	1" U-Bolt 8" x 16"
2.1	2	ST129	1" U-Bolt 8" x 12"
4	1	HT-IM5-A01	Case Planter Mount
14	2	N1N	Hex Nut
15	4	W1L	Lock Washer
16	10	N7/8N	Hex Nut
17	8	W7/8L	Lock Washer

**Patriot Equipment**  
1302 K Road Minden, NE  
308-832-0220

This drawing, and the information hereon, are the property of Minden Machine Shop Inc., and may be used only as authorized by us. Unpublished - All rights reserved under the copyright laws.

## HT-IM6 Saddle/Mount Combo




The HT-IM6 is made to fit 30" diameter tanks.

Tanks that will fit:

110 gallon tank (30" Diameter)

150 gallon tank (30" Diameter)

Tanks are sold separately.

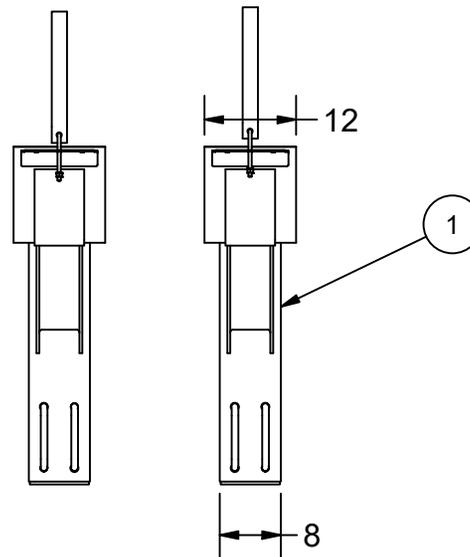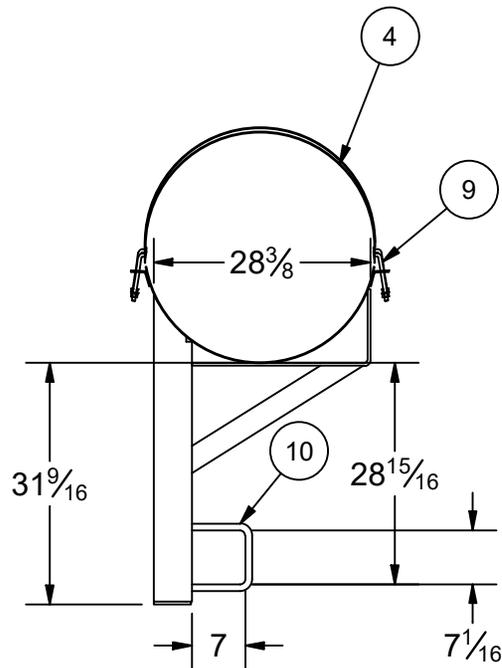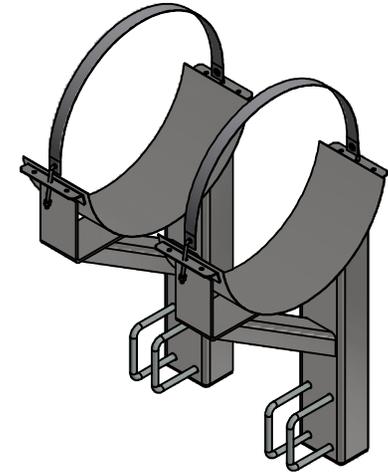

### Parts List

ITEM	QTY	PART NUMBER	DESCRIPTION
1	2	HT-IM6-A01	Bar Saddle Weldment
4	2	HT-IM6-P08	Tank Strap
9	4	ST100	J-Bolt
10	4	ST115	7/8" x 7" x 9" U-Bolt

**Patriot Equipment**  
1302 K Road Minden, NE  
308-832-0220

This drawing, and the information hereon, are the property of Minden Machine Shop Inc., and may be used only as authorized by us. Unpublished - All rights reserved under the copyright laws.

# HT-IM7 Saddle/Mount Combo




The HT-IM7 is made to fit 32" Diameter tanks

Tanks that will fit:

150 gallon tank (32" Diameter)

200 gallon tank (32" Diameter)

Tanks are sold separately.

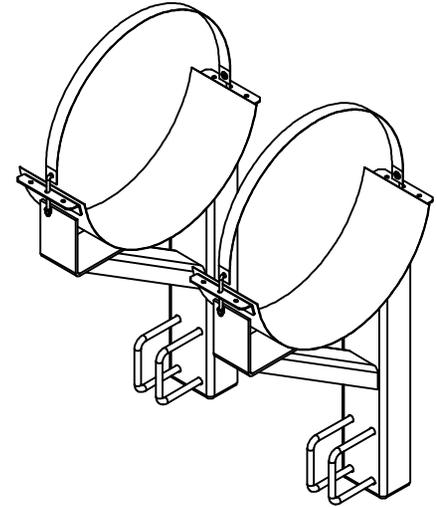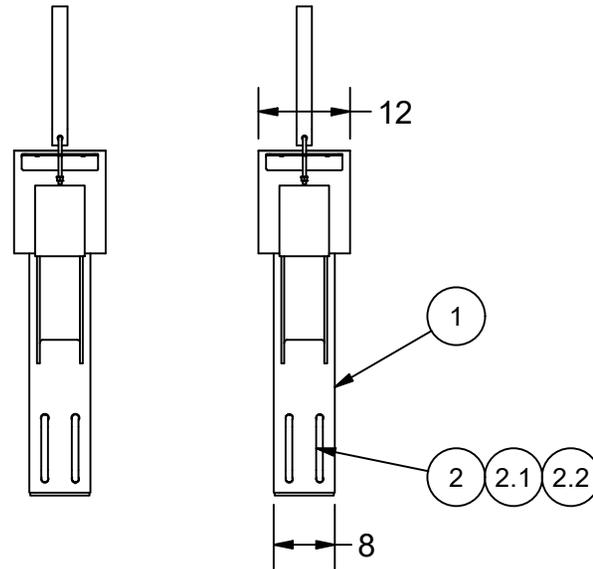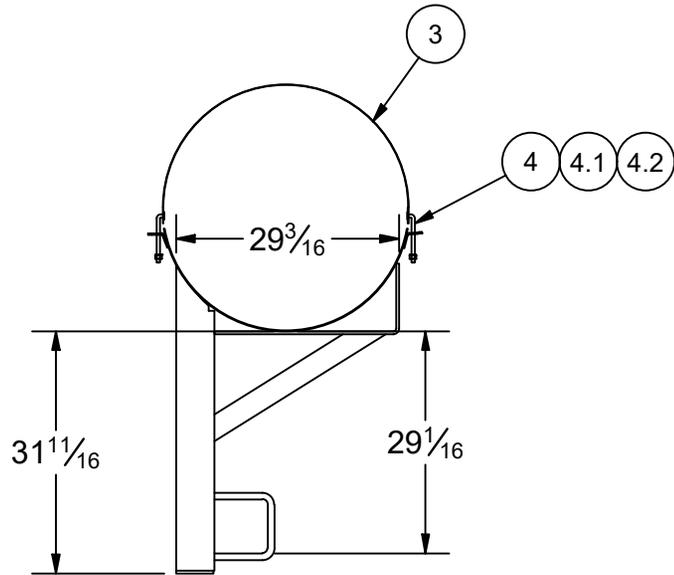

## Parts List

ITEM	QTY	PART NUMBER	DESCRIPTION
1	2	HT-IM7-A01	IM7 Weldment
2	4	ST115	7/8 x 7 x 9 U-bolt
2.1	4	W7/8L	Lock Washer
2.2	4	N7/8N	Nut
3	2	HT-IM7-P07	Tank Strap
4	4	ST100	J-Bolt
4.1	4	W1/2L	Lock Washer
4.2	4	N1/2N	Nut

**Patriot Equipment**  
 1302 K Road Minden, NE  
 308-832-0220

This drawing, and the information hereon, are the property of Minden Machine Shop Inc., and may be used only as authorized by us. Unpublished - All rights reserved under the copyright laws.

# HT-IM8 Saddle/Mount Combo


The HT-IM8 is made to fit 38" diameter tanks.

Tanks that will fit:

200 gallon tank (38" Diameter)

300 gallon tank (38" Diameter)

Tanks are sold separately.

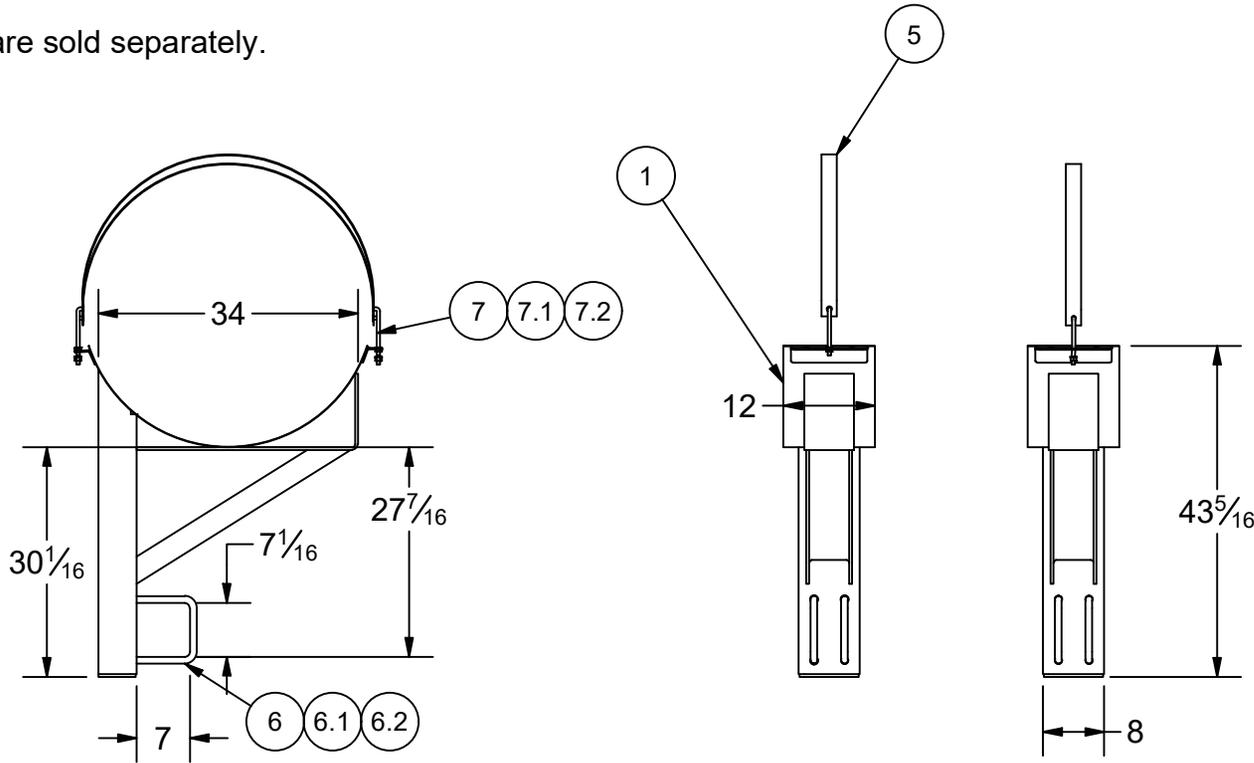

## Parts List

ITEM	QTY	PART NUMBER	DESCRIPTION
1	2	HT-IM8-A02	Bar Saddle Weldment
5	2	HT-IM8-A01	Tank Strap Assembly
6	4	ST115	7/8 x 7 x 9 U-bolt
6.1	4	W7/8L	Lock Washer
6.2	4	N7/8N	Nut
7	4	ST100	J-Bolt
7.1	4	W1/2L	Lock Washer
7.2	4	N1/2N	Nut

**Patriot Equipment**  
 1302 K Road Minden, NE  
 308-832-0220

This drawing, and the information hereon, are the property of Minden Machine Shop Inc., and may be used only as authorized by us. Unpublished - All rights reserved under the copyright laws.

# HT-IM9 Tool Bar Straddle Bracket

Tanks that will fit:




200 gallon (38" Diameter) tank

300 gallon (38" Diameter) tank

400 gallon (42" Diameter) tank

500 gallon (48" Diameter) tank

Tanks and saddles are sold separately.

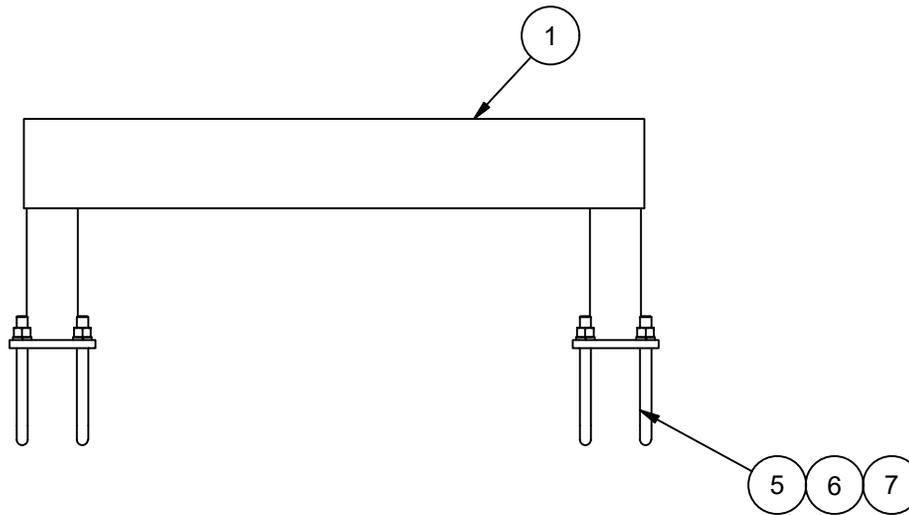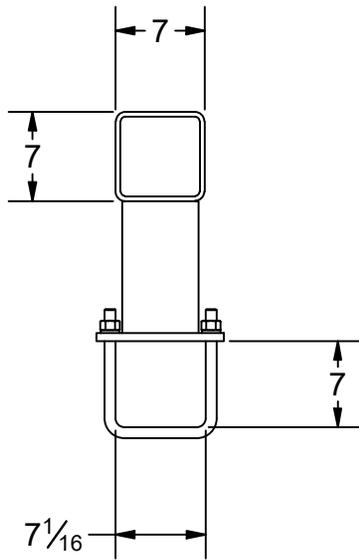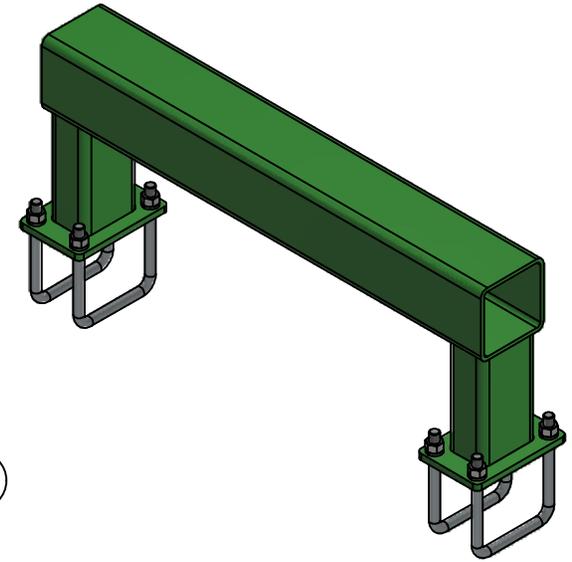

## Parts List

ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	HT-IM9-A01	IM9 Weldment
5	4	ST115	7/8 x 7 x 9 U-bolt
6	8	W7/8L	Lock Washer
7	1	N7/8N	Hex Nut

**Patriot Equipment**  
 1302 K Road Minden, NE  
 308-832-0220

This drawing, and the information hereon, are the property of Minden Machine Shop Inc., and may be used only as authorized by us. Unpublished - All rights reserved under the copyright laws.


# HT-IM11

Fits Case 1255 24 Row Planter Tongue Mount with Bulk Fill

Tanks that will fit:

- 200 Gallon (38" Diameter) tank
- 300 Gallon (38" Diameter) tank
- 400 Gallon (42" Diameter) tank
- 500 Gallon (48" Diameter) tank

Tanks and Saddles are sold separately.

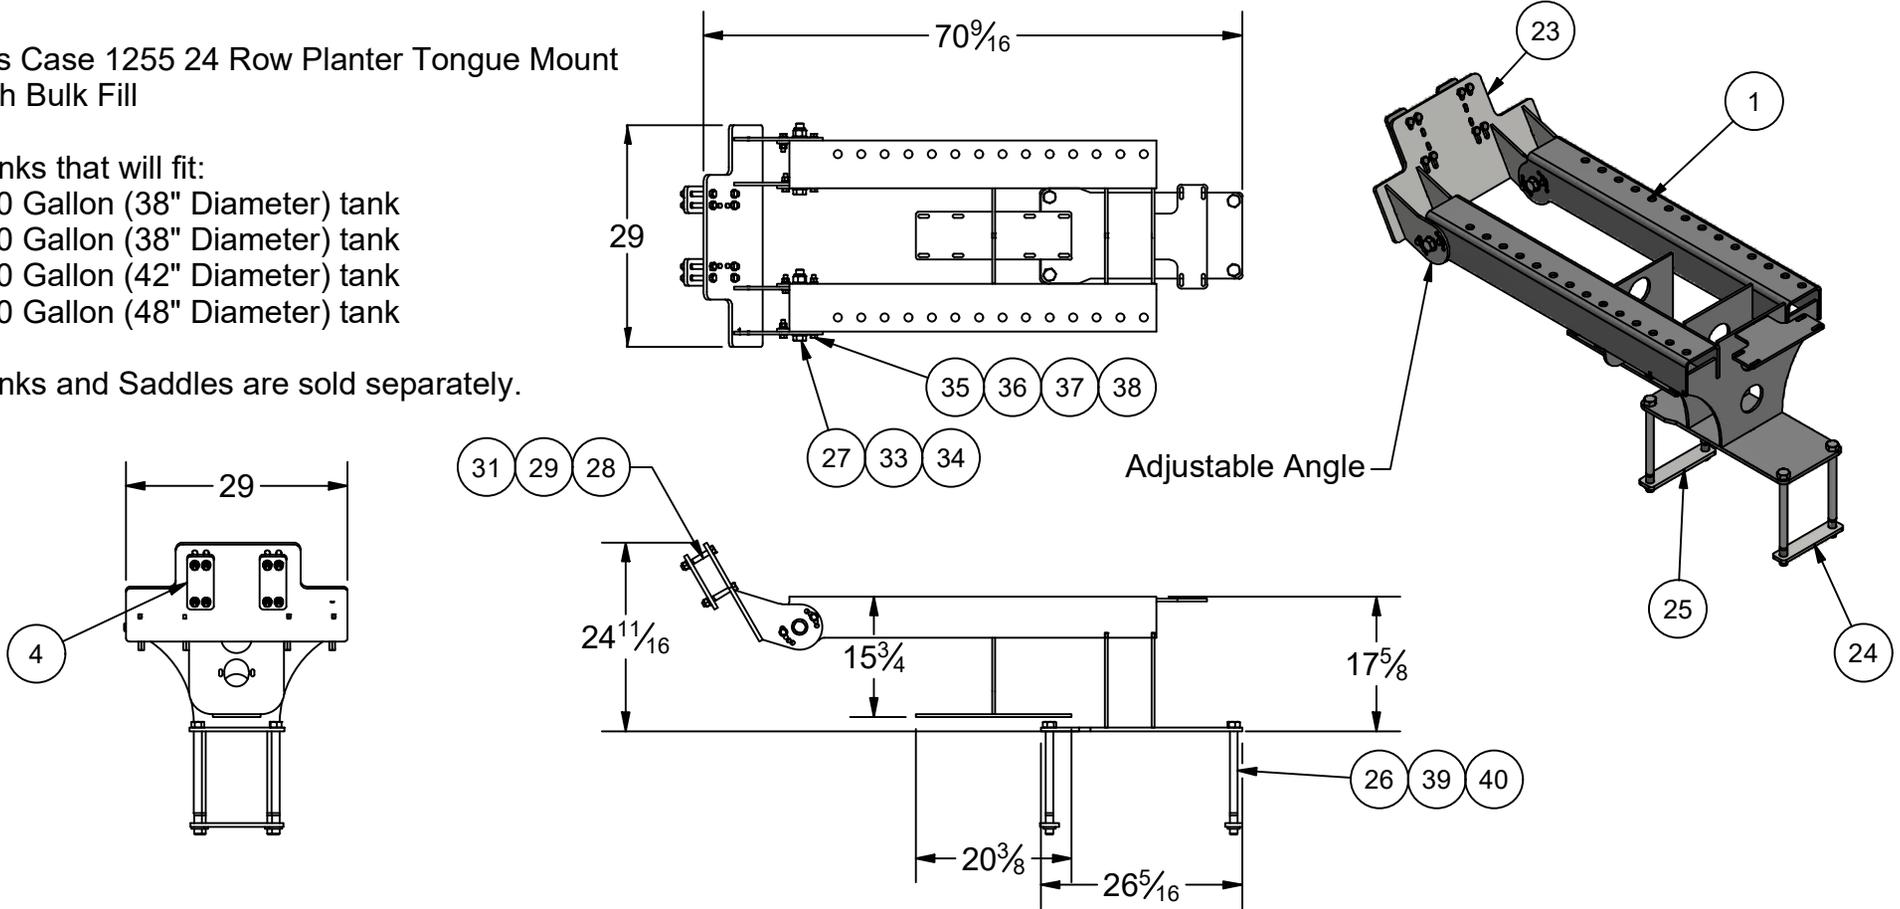

Parts List				Parts List			
ITEM	QTY	PART NUMBER	DESCRIPTION	ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	HT-IM11-A02	IM11 Base Frame Weldment	34	4	N1NYL	1 Std NC Nylock Nut
4	2	HT-IM11-P02	Base Clamp Plate	35	8	B1/2X2.5	Hex Bolt
23	1	HT-IM11-A01	Adjustment Plate Weldment	36	8	W1/2L	Lock Washer
24	1	HT-IM11-P08	Lower Narrow Bolt Plate	37	16	W1/2F	Plain Washer
25	1	HT-IM11-P09	Lower Wide Bolt Plate	38	9	N1/2N	Hex Nut
26	4	B1X14	Hex Bolt	39	4	W1L	Lock Washer
27	4	B1X2.75	Hex Bolt	40	4	N1N	Hex Nut
28	8	B5/8X4.5	Hex Bolt				
29	8	W5/8L	Lock Washer				
31	8	N5/8N	Hex Nut				
33	8	W1F	Plain Washer				

**Patriot Equipment**  
 1302 K Road Minden, NE  
 308-832-0220

This drawing, and the information hereon, are the property of Minden Machine Shop Inc., and may be used only as authorized by us. Unpublished - All rights reserved under the copyright laws.

## Torque Data for Standard Nuts, Bolts, and Capscrews

Tighten all bolts to torques specified in chart unless otherwise noted. Check tightness of bolts periodically, using bolt chart as guide. Replace hardware with same grade bolt.

Note: Unless otherwise specified, high-strength Grade 5 hex bolts are used throughout assembly of equipment.

### Bolt Torque for Standard Bolts


Bolt Size A	Grade 2		Grade 5		Grade 8	
	lb-ft	(N.m)	lb-ft	(N.m)	lb-ft	(N.m)
1/4"	6	8	9	12	12	16
5/16"	10	13	18	25	25	35
3/8"	20	27	30	40	45	60
7/16"	30	40	50	70	80	110
1/2"	45	60	75	100	115	155
9/16"	70	95	115	155	165	220
5/8"	95	130	150	200	225	300
3/4"	165	225	290	390	400	540
7/8"	170	230	420	570	650	880
1"	225	300	630	850	970	1310

Torque figures indicated are valid for non-greased or non-oiled threads and heads unless otherwise specified. Therefore, do not grease or oil bolts or capscrews unless otherwise specified in this manual. When using locking elements, increase torque values by 5%.

### Bolt Torque for Metric Bolts

Bolt Size A	Class 8.8		Class 9.8		Class 10.9	
	lb-ft	(N.m)	lb-ft	(N.m)	lb-ft	(N.m)
6	9	13	10	14	13	17
7	15	21	18	24	21	29
8	23	31	25	34	31	42
10	45	61	50	68	61	83
12	78	106	88	118	106	144
14	125	169	140	189	170	230
16	194	263	216	293	263	357
18	268	363	..	..	364	493
20	378	513	..	..	515	689
22	516	699	..	..	702	952
24	654	886	..	..	890	1206

Grade or Class value for bolts and capscrews are identified by their head markings.

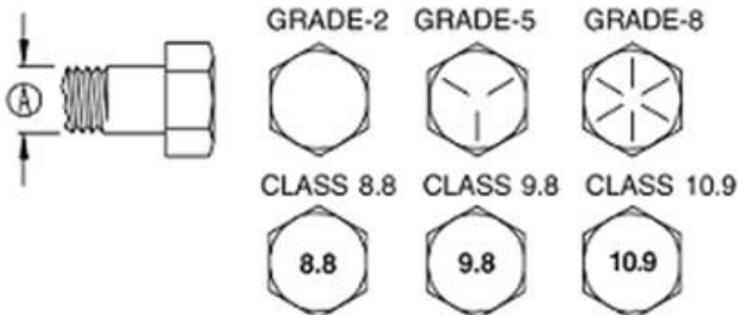

# Minden Machine Shop Inc

## **LIMITED WARRANTY**

Minden Machine Shop Inc warrants all products manufactured by it to be free of defect in material and workmanship for a period of one (1) year from the date of purchase.

This Minden Machine Shop Inc. warranty does not cover:

1. Parts and accessories supplied by Minden Machine Shop Inc. but manufactured by others. Minden Machine Shop Inc. will facilitate the other manufacturer warranty for the benefit of the purchaser but will not be bound thereby (example: augers, motors, trailers, tanks, etc.).
2. Products that have been altered by anyone other than a Minden Machine Shop Inc. employee or are used by the purchaser, for purposes other than what was intended at time of manufacture or used in excess of the "built specifications".
3. Products that are custom manufactured by Minden Machine Shop Inc. utilizing the purchaser's design which deviates from Minden Machine Shop Inc. normal production line manufactured or customized features of the products.
4. Malfunctions or damages to the product from misuse, negligence, customer alteration, accidents or product abuse due to incoming material or poor material flow ability or lack of required performance or required maintenance (e.g., poor material flow ability caused by incoming wet fertilizer or hot soybean meal, etc).
5. Loss of time, inconvenience, loss of material, down time or any other consequential damage.
6. Product use for a function that is different than designed intent (e.g., storing soybean meal in grain bin, unacceptable material in the bin such as hot bean meal when product originally designed for other application, etc).
7. Minden Machine Shop Inc is not responsible for any equipment that this product is attached to or mounted on.

To activate this warranty, the purchaser must make contact in writing with Minden Machine Shop Inc. within one (1) year of date of purchase. After contact, Minden Machine Shop Inc. has the right to determine the cause and qualify the legitimacy of the claim. Minden Machine Shop Inc., upon acceptance of a warranty claim, shall have a reasonable time to plan any repair or replacement and may affect repair or replacement out of its factory or through contract with a local repair service. If a purchaser after warranty notice is made, chooses to make the repair itself, Minden Machine Shop Inc. must approve any expenses before they are incurred to be responsible for customer reimbursement. Minden Machine Shop Inc. shall be liable on a warranty claim for repair or replacement of any defective products and this is the purchaser's sole and exclusive remedy. Minden Machine Shop Inc. will not be liable for any other or further remedy including claims for personal injury, property damage or consequential damage. The law of the State of Nebraska shall govern and any such claim and any issues with regard to the same shall be resolved in the Nebraska District Court for the county of Kearney.

### **RETURN OF MERCHANDISE**

Merchandise may not be returned without written approval from the factory. All returns must have a return authorization number. Obtain this number before the return and show it on all return items. A 15% restocking charge is made on merchandise returned. Returned merchandise must be shipped pre-paid.

### **RECEIVING MERCHANDISE AND FILING CLAIMS**

When receiving merchandise it is important to check both the number of parts and their description with packing slip. The consignee must make all claims for freight damage or shortage within 10 days from the date of delivery.

When the material leaves the factory it becomes the property of the consignee. It is the responsibility of the consignee to file a claim on any possible damage or loss. Please list your preferred routing on purchase orders.

### **MODIFICATIONS**

It is the policy of Minden Machine Shop Inc. to improve its products whenever possible and practical to do so. We reserve the right to make changes, improvements and modifications at any time without incurring the obligation to make such changes, improvements and modifications on any equipment sold previously.

# WARRANTY REGISTRATION

To register equipment, or file a claim, copy and paste the words on this page into an email or word document, fill out the appropriate information completely, and email it to [larry@mindenmachine.com](mailto:larry@mindenmachine.com) with the subject as EQUIPMENT WARRANTY, or fill it out and fax it to 308-832-1340.

**Dealer Information:** Not Applicable, check here: [  ]

Dealer Name:

Address:

City:

State:

Zip Code:

Phone #:

Email:

**End User Information:**

Purchaser:

Address:

City:

State:

Zip Code:

Phone #:

Email:

Equipment:

Serial #:

Date Of Purchase:     /     /